


Brackets for VPC-5000

VPC-5000-BKT

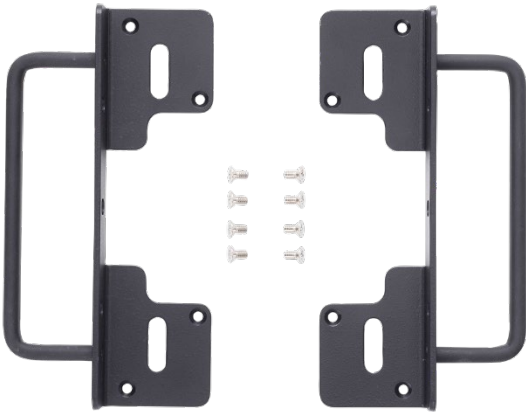

* Specifications, color and design of the products are subject to change without notice.

Packing List

Product ...2
 Product Guide ...1
 Warranty Certificate ...1
 Screw ...8


Mounting method

Mounting the bracket

This product is a bracket for the VPC-5000; do not use it with anything other than the VPC-5000.

Make sure that the power of the VPC-5000 is turned off before starting work. Screw this product to the VPC-5000 with the attached screws.




- * When installing the screws, do not apply excessive force to tighten them.
- * The proper screw tightening torque is 1.3 N · m. Screwing with a tightening torque higher than the specified may break the screw holes.

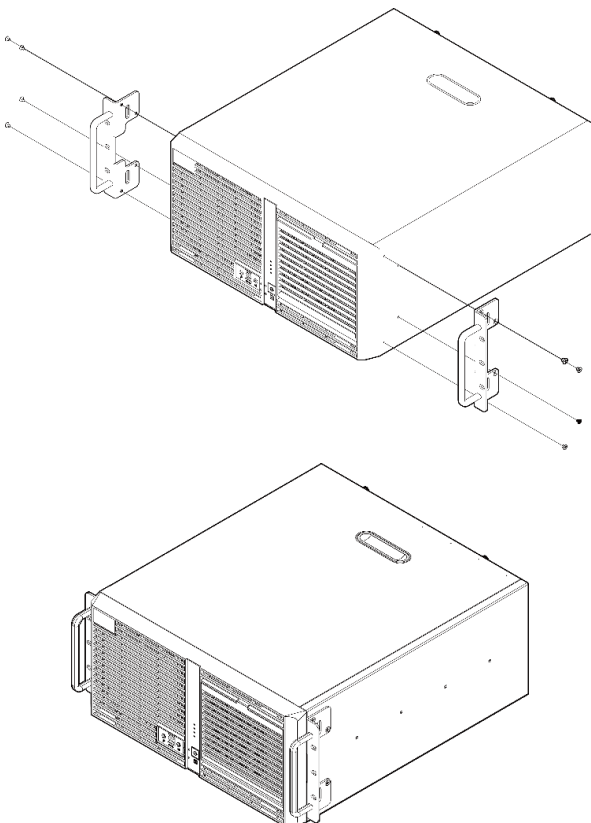

This product is an optional bracket for mounting the VPC-5000 in a rack mount. Use two brackets as a set.

- * The contents in this document are subject to change without notice.
- * Visit the CONTEC website to check the latest details in the document.
- * The information in the data sheets is as of October 2021.

VPC-5000 Dimensions (with bracket installed)

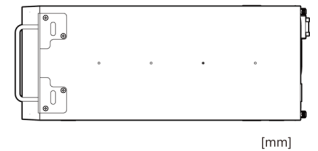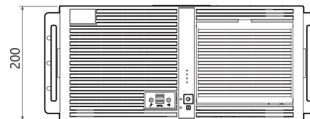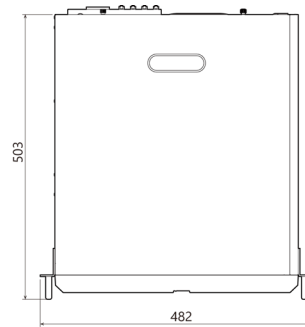

[mm]