

INSULATION / WITHSTANDING Test Instrument series 3153/3159/ST5520



Model 3153

Automatic Insulation Voltage Withstand Testing

Voltage Control from a PC

Full Remote Control

All test parameters can be controlled by RS-232C or GP-IB, including test voltage, cut-off current, resistance threshold and timer durations. Start-stop control can be provided with the 9613 single hand remote control or 9614 twohand remote control.

Standards-Based Testing

Comparator/Timer

Includes built-in pass-fail comparator and timer functions for easy compliance testing to various safety standards such as those for Electrical Appliance Safety Regulations.

Settable Ramp Up/Down Test Voltage Timing

Ramp Timer Functions

Raising and lowering of test voltage can be set for voltage withstand testing.



Test Status Read/Write

Program Function

Test conditions can be stored and recalled to support complete automation by sequencer. Up to 32 files can be stored with up to 50 steps per file.

Up to 32 files



The test voltage can be verified not only on the digital display but also on the analog meter.

Danger Lamp

The warning light flashes during testing and whenever high voltage is present at the terminals.

External Switch ·

9613 or the 9614

(The 9613 and 9614 are options.)

Fluorescent Display Tube

The display uses a bright, easy-toread fluorescent tube.

Start/stop may be controlled with the

Test Mode Selection

- Three test modes are selectable:
- 1. Manual test modes: ACW, DCW, I
- 2. Automatic test modes: $W \rightarrow I, I \rightarrow W$
- 3. Programmed test modes: testing by preprogrammed functions.

Automation Support

Automation features include programmable testing modes, EXT I/O, RS-232C, GP-IB, connection scanning and various data management functions.

Auto Discharge Feature

Any charge on the object under test is discharged by the test instrument, so there is no residual charge after testing. (DC voltage withstand, insulation resistance tests)

Save 10 Sets of Test Conditions

Store up to 10 sets of test conditions for voltage withstand and insulation resistance modes, so you can quickly switch among the test conditions. (Save/Load)

Zero-V Switching

Test voltage on/off switching can be forced to occur only at sine wave zero-crossings. (AC voltage withstand testing)

Interlock Protect Function

To ensure safety during automatic testing, test output can be interrupted and testing inhibited by input signals from automatic sensing

PWM Switching Technique

Enhanced accuracy is obtained by preventing variations in supply voltage from affecting test voltage.

Wide Range of Functions for Various Conditions

1. Pass Hold Function (0: No Hold, 1: Hold)

The pass state is held when it is activated. This is convenient for verifying the decision value.

2. Fail Hold Function (0: No Hold, 1: Hold)

The fail state is held when it is activated. This is convenient for temporarily stopping the test process.

3. Hold State (0: No Hold, 1: Hold)

This saves the state when the Stop key is pressed during a test to unconditionally end the test.

4. Momentary Out (0: Disabled, 1: Enabled)

This function outputs a voltage only when the Start key is being pressed. The Start key is effective both for EXT SW and external I/O.

5. Double Action (0: Disabled, 1: Enabled)

This function allows testing to start only if the Start key is pressed within a half second after the Stop key.

6. Fail Mode (0: Disabled, 1: Enabled)

This function allows the Hold state to be released only by the Stop key on the instrument panel.

7. "START" Interface Command (0: Disabled, 1: Enabled)

This specifies whether the "START" command is enabled.

8. Interlock Function (0: Disabled, 1: Enabled)

This specifies whether the interlock terminal for external I/O is enabled.

9. Maximum Output Voltage

Sets the upper limit of the test voltage.

Insulation Resistance Measurement Range

(0: Fixed Range, 1: Automatic Range)

This specifies whether the measurement range for insulation resistance testing should be fixed or automatically determined.

10111213 0.0.0.0 0.0.0.0 0.0.0.0 0.0.0.0 Address specified for GP-IB control

(Various functions can be specified with the SHIFT + STOP kevs)

11. Insulation Resistance Test End Mode

- 0: Test for the specified time
- 1: Stop when "pass" is detected
- 2: Stop when "fail" is detected

This specifies the method of ending insulation resistance tests.

Ramp Time Setting

- 0: No judgment during ramp-up
- 1: Judgment during ramp-up

This specifies whether the judgment is enabled during ramp-up. Valid only during voltage withstand testing.

13. PC Interface

- 0: RS-232C (PC, 9600 bps)
- 1: RS-232C (PC, 19200 bps)
- 2: GP-IB

This specifies the type of PC interface to use.

14. Electrical Discharge Function

(0: Disabled, 1: Enabled)

This specifies whether the electrical discharge function is enabled at the end of testing.

15. Test Signal Output

- 0: ON also when TEST indicator is flashing
- 1: OFF when TEST indicator is flashing
- 2: ON only when TEST indicator is flashing

(excluding ramp down time) This specifies whether the TEST signal of the external I/ O should be output when the TEST indicator is flashing.

Enhanced System Measurements

Maximum 32-Channel Multi-Point Testing

Model 3930 HIGH VOLTAGE SCANNER

Combine Model 3153 with the 3930 HIGH VOLTAGE SCANNER to perform insulation withstand testing easily. Single-end inputs test up to 8 points (between any 4 points) per instrument, and can connect up to 4 instruments together.

Model 3930 Specifications

No. of Channels	Multi-Mode: 4 High-Low channels
No. of Channels	Single-End Mode: 8 High-Common channels
Operating Voltage	5 kV AC, 7 kV DC
Action/Recovery Time	6 ms or less
Supply Voltage	24 V DC ±5% (at control signal input connector)
Size & Mass	Approx. 320(W) × 90(H) × 250(D) mm, 3 kg.

Simultaneous Protective Ground Continuity Testing

Safety Inspection System

Combine Model 3153 with the 3157-01 AC GROUNDING HITESTER and a general-purpose sequencer for a simple safety test inspection system that includes protective ground continuity and insulation withstand testing.




Model 3157-01 AC GROUNDING HITESTER

Settable current ranges: 3.0 to 31 A AC

Max. output power: 130VA

Resistance measurement range: 0 to 1.800 $\boldsymbol{\Omega}$

A Full Line-up of Models to Suit Various Needs

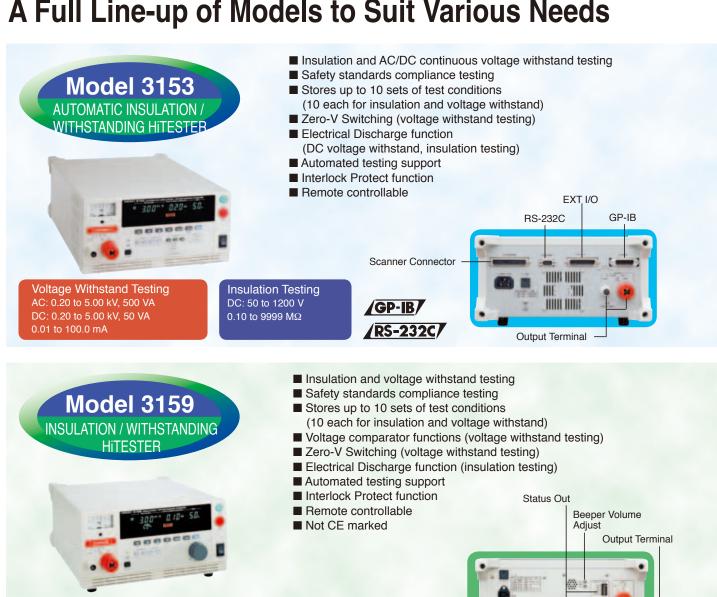

RS-232C/

EXT I/O



Insulation Testing

DC: 500/1000 V

0.5 to 2000 M Ω

Voltage Withstand Testing

AC: 0 to 2.5 kV/5.0 kV, 500 VA

0.01 to 120.0 mA

EXT I/O Output Signals

External control can be provided by various signals (signal lines have photocoupler isolation)

Pin	I/O	Signal	Function
1	OUT	READY	LO when in "ready state"
2	OUT	L-FAIL	LO when in "fail state" for the lower bound
3	OUT	U-FAIL	LO when in "fail state" for the upper bound
4	OUT	PASS	LO when in "pass state"
5	OUT	TEST	LO when in "test state"
6	OUT	H.V.ON	LO when voltage is present at the output terminals
7	IN	EXT-E	When LO, external I/O input signals are enabled
8	IN	START	When LO, it functions as a "Start" key
9	IN	STOP	When LO, it functions as a "Stop" key
10	IN	INT.LOCK	Interlock engaged when open
11	OUT	W-MODE	LO during voltage withstand testing
12	OUT	I-MODE	LO during insulation testing
13	OUT	W-FAIL	LO when in "fail state" for voltage withstand testing
14	OUT	I-FAIL	LO when in "fail state" for insulation testing
15-16	IN	ISO.GND	Ground inputs for external devices

Pin	I/O	Signal	Function
17-18	IN	EXT.COM	Common terminals for external devices
19	OUT	STEP-END	LO when at the end of a step
20	OUT	FILE-END	LO when at the end of a file
21	IN	FILE-E	LO when FILE 0 to 4 is in use
22	IN	FILE-0	File selection
23	IN	FILE-1	File selection
24	IN	FILE-2	File selection
25	IN	FILE-3	File selection
26	IN	FILE-4	File selection
33-34	OUT	ISO.DCV	Internal power 5V DC (60 mA)
35-36	IN	EXT.DCV	External power supply (5 to 30V DC)

Various Function Settings

- 1. PASS Hold function
- 2. FAIL Hold function
- 3. Hold function
- 4. Momentary out
- 5. Double actions
- 6. FAIL mode
- 7. "START" interface command
- 8. Interlock function
- 9. Maximum Output Voltage
- 10. Insulation Resistance measurement range
- 11. Insulation Resistance Test End mode
- 12. Ramp Timer setting
- 13. PC Interface
- 14. Electrical Discharge function
- 15. TEST signal output

Status Out

When the output conditions set by the DIP switches are satisfied (OR condition), output is provided at relay contacts.

1. H.V.ON	Output voltage generation
2. TEST	Testing in progress
3. PASS	Passed
4. FAIL	Failed
5. INT.LOCK	Interlocked
6. READY	Ready
7. EXT.CONT.	Under external control
8. POWER.ON	Powers the 3159 on

Pin	I/O	Signal	Function
1	OUT	READY	LO when in "ready state"
2	OUT	L-FAIL	LO when in "fail state" for the lower bound
3	OUT	U-FAIL	LO when in "fail state" for the upper bound
4	OUT	PASS	LO when in "pass state"
5	OUT	TEST	LO when in "test state"
6	OUT	H.V.ON	LO when voltage is present at the output terminals
7	IN	EXT-E	When LO, external I/O input signals are enabled
8	IN	START	When LO, it functions as a "Start" key
9	IN	STOP	When LO, it functions as a "Stop" key
10	IN	INT.LOCK	Interlock engaged when open
11	OUT	W-MODE	LO during voltage withstand testing
12	OUT	I-MODE	LO during insulation testing
13	OUT	W-FAIL	LO when in "fail state" for voltage withstand testing
14	OUT	I-FAIL	LO when in "fail state" for insulation testing
15-18	IN	ISO.COM	Ground inputs for external devices
33-36	OUT	ISO.DCV	Internal power 15V DC (100 mA)

Pin	I/O	Signal	Function
1	OUT	READY	LO when in "ready state"
2	OUT	L-FAIL	LO when in "fail state" for the lower bound
3	OUT	U-FAIL	LO when in "fail state" for the upper bound
4	OUT	PASS	LO when in "pass state"
5	OUT	TEST	LO when in "test state"
6	OUT	H.V.ON	LO when voltage is present at the output terminals
7	IN	EXT-E	When LO, external I/O input signals are enabled
8	IN	START	When LO, it functions as a "Start" key
9	IN	STOP	When LO, it functions as a "Stop" key
10	IN	INT.LOCK	Interlock engaged when open
11	OUT	W-MODE	LO during voltage withstand testing
12	OUT	I-MODE	LO during insulation testing
13	OUT	W-FAIL	LO when in "fail state" for voltage withstand testing
14	OUT	I-FAIL	LO when in "fail state" for insulation testing
15-18	IN	ISO.COM	Ground inputs for external devices
33-36	OUT	ISO.DCV	Internal power 15V DC (100 mA)

- 1. PASS Hold function
- 2. FAIL Hold function
- 3. Hold function
- 4. Momentary out
- 5. Double actions
- 6. FAIL mode
- 7. "START" RS command
- 8. Interlock function
- 9. Voltage Comparator position
- 10. Insulation Resistance measurement range
- 11. Insulation Resistance Test End mode

Pin	I/O	Signal	Function
1	OUT	READY	LO when in "ready state"
2	OUT	L-FAIL	LO when in "fail state" for the lower bound
3	OUT	U-FAIL	LO when in "fail state" for the upper bound
4	OUT	PASS	LO when in "pass state"
5	OUT	TEST	LO when in "test state"
6	OUT	H.V.ON	LO when voltage is present at the output terminals
7	IN	EXT-E	When LO, external I/O input signals are enabled
8	IN	START	When LO, it functions as a "Start" key
9	IN	STOP	When LO, it functions as a "Stop" key
10	IN	INT.LOCK	Interlock engaged when open
15-18	IN	ISO.COM	Ground inputs for external devices
33-36	OUT	ISO.DCV	Internal power 15V DC (100 mA)

- 1. PASS Hold function
- 2. FAIL Hold function
- 3. Hold function
- 4. Momentary out
- 5. Double actions
- 6. FAIL mode
- 7. "START" RS command
- 8. Interlock function
- 9. Voltage Comparator position

Specifications Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year

■ Voltage Withstand Testing

	Mode AUTOMATIC INSULATION /		Model 3159 INSULATION / WITHSTANDING HITESTER	Model 3158 AC WITHSTANDING VOLTAGE HITESTER
	AC	DC	AC	
Output voltage	0.20 to 5.00 kV	0.20 to 5.00 kV	Two ranges: AC	0 to 2.5 or 5.0 kV
Voltage output method	PWM switching method (zero-switching)	PWM switching method	Zero-sv	vitching
Transformer capacity	500 VA (rated 30 minutes)		500 VA (rated	1 30 minutes)
Output capacity		50 VA (continuous)		
Voltage adjustment method	Digital setting (0.01 l	kV setting resolution)	Manual a	djustment
Output voltage accuracy	±1.5% of setting	g voltage ±2 dgt.		
Voltage change rate	\pm 7% or less (max. 5 kV at 100 mA → unloaded: with resistive load)*2	$\pm 16\%$ or less (max. 5 kV at10 mA \rightarrow unloaded: with resistive load)*2	rd:	
Voltage waveform	Sine wave (5% or less distortion, unloaded)	ij	Power waveform	
Voltage frequency	50 or 60 Hz ±0.2%		Power sync	hronization
Output ripple voltage		6% of output voltage or less (at 5 kV DC, 10 mA, resistive load)	d)	
Output current	100 mA *1	10 mA (continuous)		
	Average rectified effective value display	Average display	Average rectified effect	tive value display
Voltmeter	Digital: 0.00 to 5. Accuracy: Analog: 0 to 5 kV Accuracy:	±1.5% f.s. (full scale)	Digital: 0.00 to 5.00 kV (full scale) Accuracy: ±1.5% f.s. Analog: 0 to 5 kV (full scale) Accuracy: ±5% f.s.a	
Current measurement range	0.01 to 100.0 mA	0.01 to 10.0 mA	0.01 to 1	20.0 mA
Indicated value range	10 or 100 mA	10 mA	2, 8, 32 0	r 120 mA
Measurement resolution	0.00 to 10.00 or 0.01 mA (10-mA range) 10.1 to 100.0 or 0.1 mA (100-mA range, AC only)		0.01 mA (2- or 8-mA range), 0.1 m 1 mA (120-mA range)	A (32-mA range),
Current measurement accuracy	± (2% rdg. + 5 dgt.) common to each range *3		± (3% f.s. + 20 μA) for all range	s (at 5% power distortion or less)

^{*1.} Time vs. Output Voltage (at 23°C ambient)

■ Insulation Resistance Testing

	Model 3153	Model 3159	Model 3158
Test voltage	Output voltage: Positive polarity 50 to 1200V DC Voltage adjustment method: Digital setting (1V resolution) Output voltage accuracy: ±1.5% ±2 dgt. of setting level	Rated voltage: 500 or 1000V DC Unloaded voltage: 1 to 1.2 times rated voltage	
Rated measurement current	1 mA	1 to 1.2 mA	
Short-circuit current	200 mA or less	4 to 5 mA (500V) 2 to 3 mA (1000V)	
Voltmeter	Average display Digital: 0 to 1200V DC (full scale) Accuracy: ±1.5% rdg. ±2 dgt. Analog: 0 to 1200V DC	Average display Digital: 0 to 1200V DC (f.s.)	
	Accuracy: ±5% f.s. (5 kV full scale)	Analog: not applicable	
Measurement range/accuracy	0.100 to 1.049 MΩ 1.05 to 10.49 MΩ*1 10.5 to 104.9 MΩ*1 105 to 9999 MΩ*1 Fundamental accuracy: $\pm 4\%$ rdg.*2	0.5 to 999 M Ω (500V)/ \pm 4% rdg. 1 to 999 M Ω (1000V)/ \pm 4% rdg. 1000 to 2000 M Ω / \pm 8% rdg.	···

^{*1.} Measurement range changes according to test voltage.

Current Measurement Range Max. Test Time Standby Time 1 ≤ 60 mA continuous none 60 mA < 1 ≤ 100 mA 15 minutes 15 minutes

^{*2.} Unloaded = 40 M Ω load (instrument input impedance) *3. Plus scanner accuracy, when used.

^{*2.} Plus scanner accuracy, when used. * Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year

■ Decision Function

	Model 3153	Model 3159	Model 3158
Decision method	Window comparison method (digital specification)		
Decision results	UPPER-FAIL: Measured current (insulation resistance value) exceeded the specified upper bound. PASS: Measured current (insulation resistance value) was between the specified upper and lower bounds during the specified time elapsed LOWER-FAIL: Measured current (insulation resistance value) was less than the specified lower bound (Note: Model 3158 has no insulation resistance function		
Decision processing	For each decision result, output the display portion, the beeper sound,	and EXT I/O signal	
Specification ranges	$\begin{tabular}{lll} Voltage with stand testing: \\ ACV: 0.1 to 100 mA (upper bound) / 0.1 to 99 mA (lower bound) \\ DCV: 0.1 to 10 mA (upper bound) / 0.1 to 9.9 mA (lower bound) \\ Insulation testing: 0.10 to 9999 MQ (same upper/lower bounds) \\ \end{tabular}$	Voltage withstand testing: $0.1 \text{ to } 120 \text{ mA (upper bound)} / 0.1 \text{ to} \\ \text{Insulation testing (Model 3159 only):} \\ 0.2 \text{ to } 2000 \text{ M}\Omega \text{ (same upper/lower bound)} \\$	
Specification resolution	$ \begin{tabular}{lllllllllllllllllllllllllllllllllll$	Voltage withstand testing: 0.1 mA (0.1 to 9.9 mA), 1 mA (10 to Insulation testing (Model 3159 only): 0.01 M Ω (0.2 to 2 M Ω), 0.1 M Ω (2.1 1 M Ω (21 to 200 M Ω), 10 M Ω (210 to	to 20 MΩ),

■ Timers

	Model 3153	Model 3159	Model 3158
Testing timer	Specification range: 0.3 to 999 s Specification resolution: 0.1 s (0.3 to 99.9 s), 1 s (100 to 999 s) Accuracy: ±0.5% of specified value	Specification range: 0.5 to 999 s Specification resolution/accuracy: 0.1 s (0.5 to 99.9 s), ±50 ms; 1 s (100 to 999 s) ±0	
	Action: (when ON is specificed) after (when OFF is specified) displ:	starting, the countdown from the specificacys the elapsed time from starting	ied time is displayed.
Ramp timer (withstand test time)	Specification range: 0.1 to 99.9 s ramp-up and -down specified separately Specification resolution/accuracy: 0.1 s, ±0.5% of specified value		
Delay timer (insulation resistance test time)	Specification range: 0.1 to 99.9 s Specification resolution/accuracy: 0.1 s, ±0.5% of specified value Action: specify a delay time after testing is set to begin to inhibit decisions during that time	Non-deterministic interval: 0.5 s (Mask time until determination begins during insulation resistance testing)	

■ Interfaces

	Model 3153	Model 3159	Model 3158	
EXT I/O	-collector outputs, active low, max. 30V DC loaded voltage, all signal lines photocoupler-isolated			
EXT SW	START, STOP, SW.EN (panel terminal switch enabled), connection point inputs			
RS-232C	Start-stop synchronization, full duplex, 9600 or 19200 bps	Start-stop synchronization, full duplex, 9600 bps		
GP-IB	IEEE 488.2 (1987) compliant			

■ General Specifications

	Model 3153	Model 3159	Model 3158
Display	Fluorescent display tube (digital display), analog meter		
Monitor functions	Output voltage, detected current, measured resistance		Output voltage, detected current
Monitor period	2 times per second minimum		
Operating temperature range	0 to 40 °C, 80% RH maximum (non-condensating)		
Storage temperature range	-10 to 50 °C, 90% RH maximum (non-condensating)		
Temperature and humidity range for guaranteed accuracy	23 ± 5 °C, 80% RH maximum (non-condensating) (after 10-min. warm-up for 3153 , or 5 -min. warm-up for 3158 and 3159)		
Operating environment	Indoors, up to 2000m ASL		
Power supply voltage	100 to 240V AC (installed fuse depends on actual voltage, so specify supply voltage when ordering) 100 to 120V AC: installed fuse 250V T10AL 200 to 240V AC: installed fuse 250V T5AL	100V AC (3159)for Japan only 220V AC (3159-02) 120V AC (3159-01)discontinued 230V AC (3159-03)discontinued 240V AC (3159-04)discontinued	100V AC (3158)for Japan only 120V AC (3158-01)discontinued 220V AC (3158-03)discontinued 230V AC (3158-04)discontinued 240V AC (3158-05)discontinued
Power supply frequency	50 or 60 Hz		
Max. power consumption	1000 VA	800 VA	
Dimensions	Approx. 320 (W) × 155 (H) × 480 (D) mm	Approx. 320 (W) × 155 (H) × 330 (D) mm	Approx. 320 (W) × 155 (H) × 263 (D) mm
Mass	Approx. 18 kg	Approx. 18 kg (3159), 20.5 kg (3159-01), 21.5 kg (3159-02/-03/-04)	Approx. 16 kg (3158-01), 18 kg (3158-03/-04/-05)
Supplied accessories	9615 H.V. TEST LEADS (high voltage side and return, one each), POWER CORD, EXTRA FUSE		
Options	9613 REMOTE CONTROL BOX (SINGLE), 9614 REMOTE CONTROL BOX (DUAL), 9637 RS-232C CABLE (9-pin Dsub to 9-pin Dsub), 9638 RS-232C CABLE (9-pin Dsub to 25-pin Dsub), 9267 SAFETY TEST DATA MANAGEMENT SOFTWARE		
	3930 HIGH VOLTAGE SCANNER 9151-02 GP-IB CONNECTOR CABLE (2m) 9151-04 GP-IB CONNECTOR CABLE (4m)	9616 WARNING LAMP	



- Rapidly assess in as fast as 50 ms
- Quick discharge of residual voltage
- Freely configurable test voltage
- -- Set from 25 V to 1000 V, 1 V resolution --
- Contact check function
 - -- Prevents errors due to poor contact --
- Short-circuit check function
 - -- Stops potentional defects from reaching the market --



Basic Specifications

Testing voltage/	25 V ≤ V < 100 V (2.000/20.00/200.0 MΩ),	
measurement ranges	$100 \text{ V} \le \text{V} < 500 \text{ V} (2.000/20.00/200.0/2000 M}\Omega),$	
(Auto / Manual)	500 V ≤ V ≤ 1000 V (2.000/20.00/200.0/4000/9990 MΩ)	
	±2 % rdg. ±5 dgt.	
Pagia agguragy	25 V ≤ V < 100 V [0 to 20 MΩ]	
Basic accuracy	100 V ≤ V < 500 V [0 to 20 MΩ]	
	500 V ≤ V ≤ 1000 V [0 to 200 MΩ]	
Measurement speed	Fast: 30 ms/time, Slow: 500 ms/time (selectable)	
Memory capacity	up to 10 items (can be saved/loaded)	

Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 1 year

3153 AUTOMATIC INSULATION / WITHSTANDING HITESTER

Options

3930 HIGH VOLTAGE SCANNER

9613 REMOTE CONTROL BOX (SINGLE)

9614 REMOTE CONTROL BOX (DUAL)

9151-02 GP-IB CONNECTOR CABLE (2m)

9637 RS-232C CABLE (1.8 m) (9pin-9pin/Cross)

9638 RS-232C CABLE (1.8 m) (9pin-25pin/Cross)

9267 SAFETY TEST DATA MANAGEMENT SOFTWARE

for Japan only ANDING VOLTAGE HITESTER (100V AC) 3158 3158-01 A Discontinued ANDING VOLTAGE HITESTER (120V AC) 3158-03 A Discontinued ANDING VOLTAGE HITESTER (220V AC) 3158-04 And Discontinued ANDING VOLTAGE HITESTER (230V AC) 3158-05 A niscontinued ANDING VOLTAGE HITESTER (240V AC)

■ Options

9613 REMOTE CONTROL BOX (SINGLE)

9614 REMOTE CONTROL BOX (DUAL)

9637 RS-232C CABLE (1.8 m) (9pin-9pin/Cross)

9638 RS-232C CABLE (1.8 m) (9pin-25pin/Cross)

9267 SAFETY TEST DATA MANAGEMENT SOFTWARE

3157-01 AC GROUNDING HITESTER

ST5520 **INSULATION TESTER**

ST5520-01 INSULATION TESTER (with BCD output)

for Japan only / WITHSTANDING HITESTER (100V AC) 3159-01 Discontinued / WITHSTANDING HITESTER (120V AC) 3159-02 INSULATION / WITHSTANDING HITESTER (220V AC) 3159-03 Discontinued / WITHSTANDING HITESTER (230V AC)

Options

9613 REMOTE CONTROL BOX (SINGLE)

9614 REMOTE CONTROL BOX (DUAL)

9616 WARNING LAMP

9637 RS-232C CABLE (1.8 m) (9pin-9pin/Cross)

9638 RS-232C CABLE (1.8 m) (9pin-25pin/Cross)

9267 SAFETY TEST DATA MANAGEMENT SOFTWARE



REMOTE CONTROL BOX (SINGLE)



REMOTE CONTROL BOX (DUAL)





When using Model 9616 with Models 3153 or 3158, please contact HIOKI for specific details.

Note: Company names and Product names appearing in this catalog are trademarks or registered trademarks of various companies



HEADQUARTERS 81 Koizumi, Ueda, Nagano, 386-1192, Japan TEL +81-268-28-0562 FAX +81-268-28-0568 http://www.hioki.com/E-mail: os-com@hioki.co.jp HIOKI (Shanghai) SALES & TRADING CO., LTD. TEL +86-21-63910090 FAX +86-21-63910360

HIOKI SINGAPORE PTE. LTD. TEL +65-6634-7677 FAX +65-6634-7477 E-mail: info-sg@hioki.com.sg

HIOKI KOREA CO., LTD. TEL +82-2-2183-8847 FAX +82-2-2183-3360 E-mail: info-kr@hioki.co.jp

HIOKI USA CORPORATION

TEL +1-609-409-9109 FAX +1-609-409-9108 http://www.hiokiusa.com / E-mail: hioki@hiokiusa.com

http://www.hioki.cn / E-mail: info@hioki.com.cn

DISTRIBUTED BY