

# HIOKI

## CLAMP ON POWER LOGGER PW3365



## Eliminate the risk of short-circuits and electrical accidents



The world's first instrument to offer  
no-metal-contact power measurement

Free from the risk of short-circuit accidents since no metal comes into contact with energized parts, the Clamp On Power Logger PW3365-20 can measure voltage, current, and power right on the cable, letting you safely test in locations that were dangerous or even impossible in the past.




\*For Voltage Sensor PW9020

# Safe, Easy, Voltage Measurement

The PW3365-20's dedicated voltage sensor delivers the world's first no-metal-contact measurement.

Free yourself from the risk of short-circuits by measuring right on the cable sheath without ever needing to touch metal to energized parts

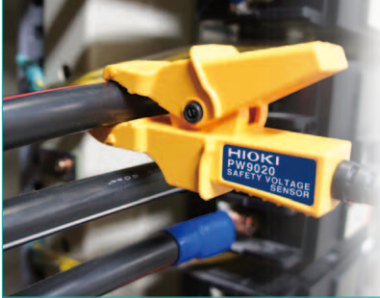

Freely clip either horizontally or vertically



Measure both thick and thin cables

Measure in potentially hazardous locations




Locations without energized parts

Measure on the outside of cables



Locations with covered terminals


Measure without removing the covers

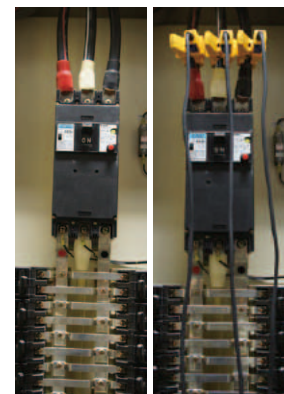

Locations with a risk of electric shock


Measure at safer points

How is voltage measured without any metallic contact?

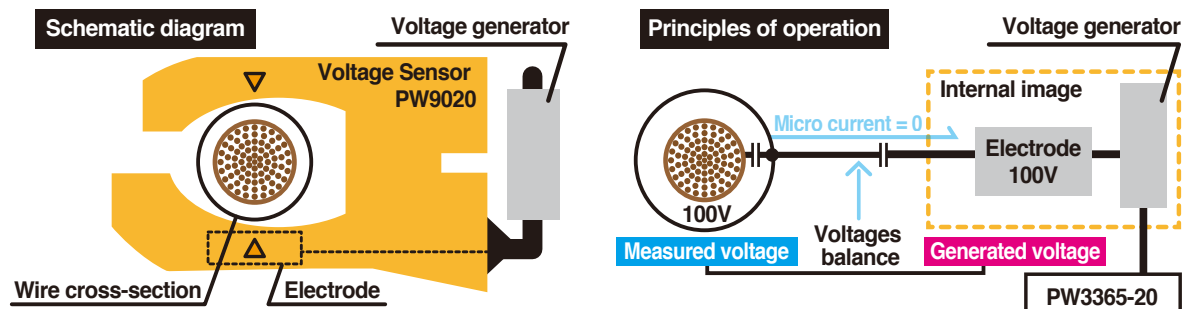


Inside the PW9020 is an electrode (a metal plate). When there is a potential difference between this electrode and the measured line, a minute current flows as a result. By detecting this minute current and generating a voltage such that the current declines to zero, it is possible to accurately measure the voltage without being affected by the outer diameter of the measured cable or its insulation.



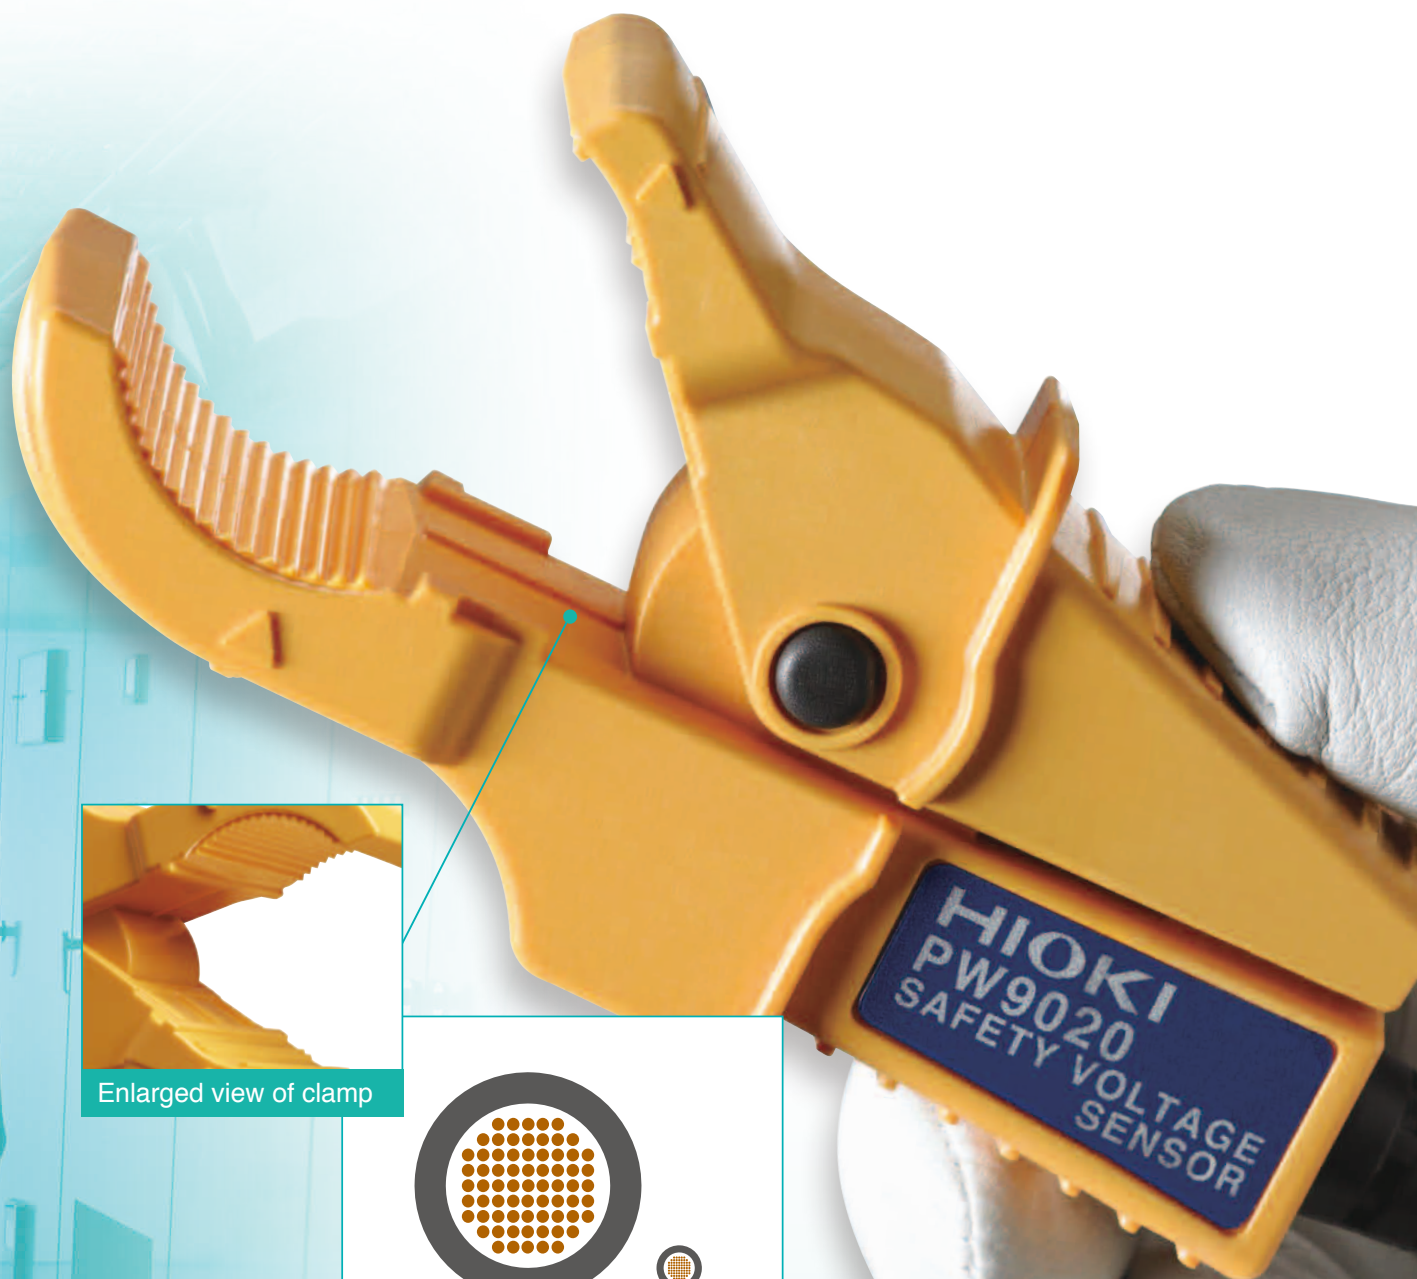

Enlarged view of clamp

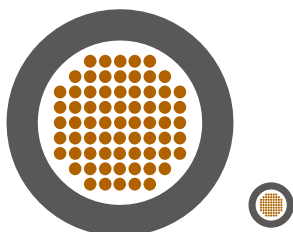

Actual maximum size :  $\phi 30$  mm  
Actual minimum size :  $\phi 6$  mm

Compatible conductor diameters

#### SAFETY VOLTAGE SENSOR PW9020 Specifications

Compatible conductor types	Insulated wires*1 In door PVC or metal parts
Compatible conductor diameters	Finished outer diameter $\phi 6$ mm to $\phi 30$ mm
Effective measurement range	90 V rms to 520 V rms
Accuracy	$\pm 1.5\%$ rdg. $\pm 0.8$ V (combined accuracy with PW3365-20)*2
Effect of phase	Accuracy combined with the PW3365-20 is within $\pm 1.3\%$ (at 50 Hz/60 Hz, f.s. input)
Maximum rated voltage to earth	CATIV 300V / CATIII 600V
Cord length	3m (9.84 ft)
Mass	Approx. 220g (7.8 oz)
Operating temperature and humidity	0°C to 50°C (32°F to 122°F), 80% RH or less (no condensation)
Storage temperature and humidity	-10°C to 60°C (14°F to 122°F), 80% RH or less (no condensation)
Dielectric strength	7.06k Vrms AC
Applicable standards	Safety: EN61010, EMC: EN61326



\* includes relay box on cord



Soil, residue, or moisture on the insulated wires may result in lower voltage and power values than their true values. Use a dry cloth to remove before measuring.

\*1: Shielded wires cannot be measured. The product may not be able to accurately measure multi-core cables or cables that have thick insulation.

\*2: For frequencies of 45 Hz to 66 Hz.

Effects of humidity: Add the following to the combined accuracy (for voltage, power, and phase) with the PW3365-20  
Accuracy within  $\pm 1\%$  f.s., phase within  $\pm 1^\circ$ ,  
measuring an insulated wire at a humidity of 70% to 80% RH  
Effects of adjacent wires: Add the following to the combined accuracy (for voltage and power) with the PW3365-20  
Within  $\pm 1\%$  f.s. while a wire with a phase difference of 400 V is in contact with the grip

## Review Results

At the  
WorksiteDisplay measured values as a graph  
and evaluate results at a glance

Measured values can be displayed as a graph, which is convenient when using the instrument in power management applications. Since you can statistically review not only the measured value at that moment, but also measured values that have been recorded, it's easy to check values on the spot.

## Parameter List and Waveform Displays


Select a display with the screen selection button

Review a list of principal test parameters, including voltage, current, power, frequency, and energy


Select the WAVE display to check voltage and current waveforms.



List display screen

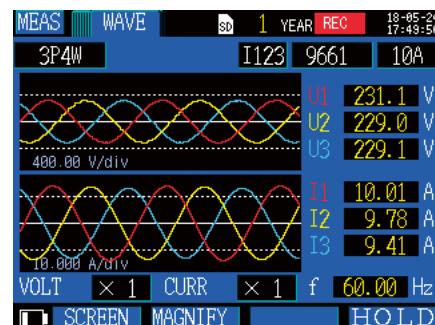

Waveform display screen

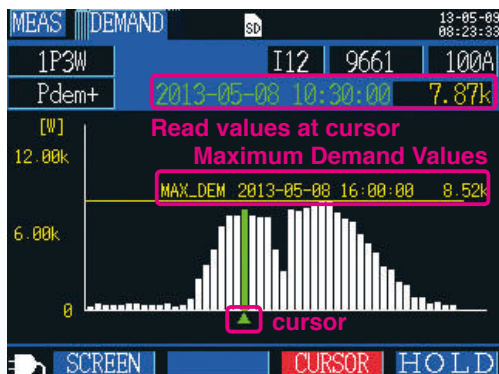

Bar graph of values measured over a period of 24 hours at a 30-minute interval

## Demand Graph Display

Display demand value trends

It's easy to check the maximum demand value and the time at which it occurred.

Particularly useful in power management applications

## Evaluate Photovoltaic Generation Capabilities



You can create a bar graph that makes it obvious whether power is being bought or sold by switching the active power demand value display from consumption to regeneration



Graph of values measured over a period 24 hours at 5-minute intervals

## Trend Graph Display

\* Except for demand


Choose one measured parameter to create a time-series display as a graph

Monitor power variations to check for connections between equipment operating status and power consumption.


Display the maximum, minimum, and average values at the cursor position

Identify these parameters right on the time-axis graph display

Example  
Power trend graph display

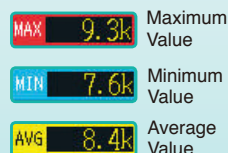

## Capture and record all fluctuations

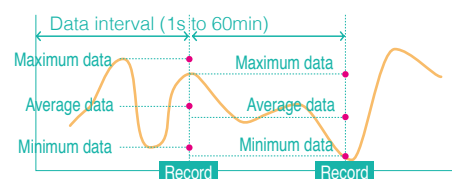

Set the power logger to save all parameters to record the maximum, minimum, and average values during the set recording interval.



# Configure Settings with Quick Set

## Graphical, easy-to-understand guidance for connection procedures

Quick Setup guides you through the process of setting up the instrument for measurement, right up to starting measurement, on the screen to simplify set work. Since any mistaken connections will trigger a FAIL message, the feature also helps prevent measurement mistakes. If you receive a FAIL result, the instrument will also indicate the location of the problem.


### Setup Flow (example: 3P4W)

STEP1 Quick Set START / Choose the wire type


STEP2 Connect the leads to the PW3365-20



STEP3 Connect the voltage sensor


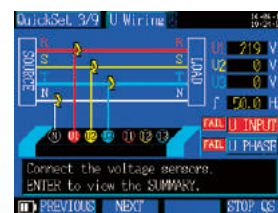


STEP4 Connect the clamp sensors

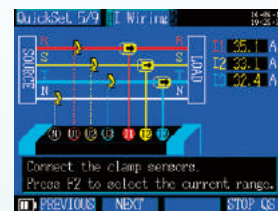

STEP5 Select the current range

STEP6 Check wire connection status

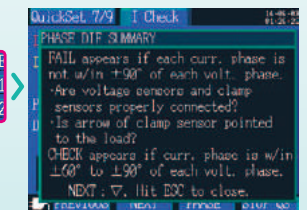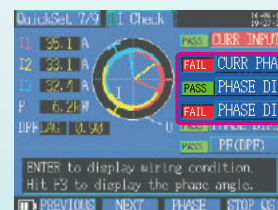

### If you receive a FAIL result

Highlight the FAIL message with the cursor and press ENTER to view information about where the connection needs to be corrected.


Measurement

### Miswiring Example (Clamp Orientation)


Neither power nor power factor can be measured accurately with the clamp in the wrong orientation.

Correct Orientation

Point the arrow toward the load side

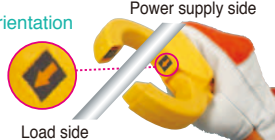


FAIL The I vector's phase direction is opposite the determination area.

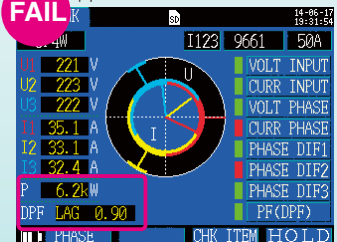

P: 6.2 kW  
Power displayed value is too low

PASS The I vector's phase direction is within the determination area.

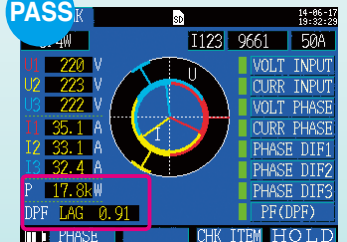

P: 17.8 kW

■ CURR PHASE Red means : FAIL ■ VOLT PHASE Green means : PASS


Safely and Easily

# Measure Harmonic

**NEW**

## Measure harmonics with no-metal-contact voltage measurement technology

This useful feature has come to the PW3365, enabling the instrument to measure voltage and current harmonics in addition to power. Hioki's no-metal-contact voltage measurement technology lets you safely and easily measure THD and the dominant 5th- and 7th-order harmonics.

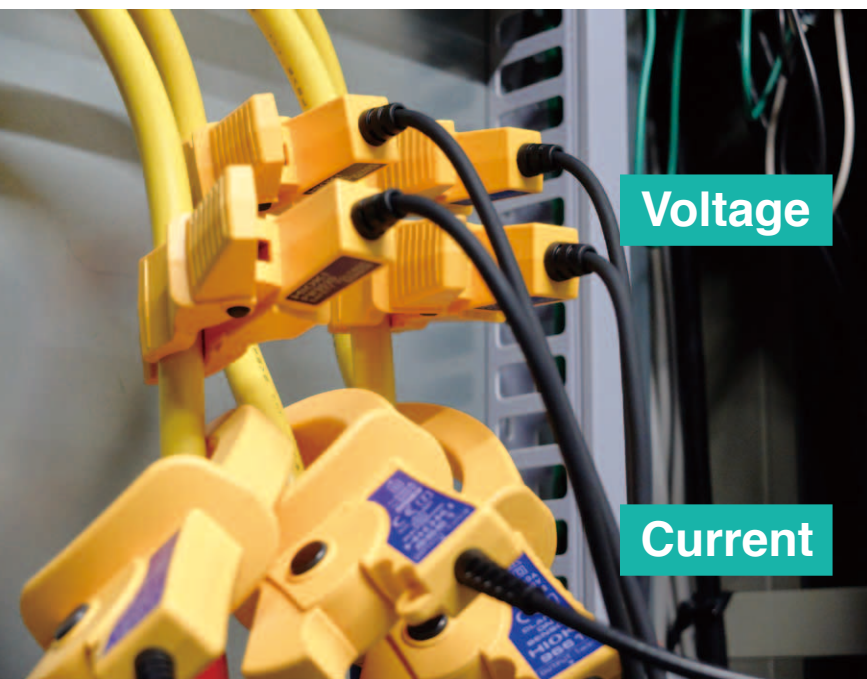

### Measurement parameters

Harmonic voltage

Harmonic current

Voltage total harmonic distortion

Current total harmonic distortion

### Screen displays

Voltage and current levels

Graph display

Voltage and current content percentage

List display

### Harmonic Display

#### Display harmonics up to the 13th order

Present harmonic RMS values and content percentages as a list of numerical values or graph and display total harmonic distortion ratio.

The PW3365 can analyze voltage and current harmonic components from the fundamental wave to the 13th order on 50 Hz/60 Hz power lines.



Harmonic Graph Display



Harmonic Value List Display


You can save maximum, average, and minimum values in binary format for each time interval to the instrument's SD card.

The Power Logger Viewer SF1001 is required in order to display data on a computer.



#### Time-series display of harmonics

Select the fundamental wave, 3rd order, or 5th order for current harmonics to display a time-series graph.

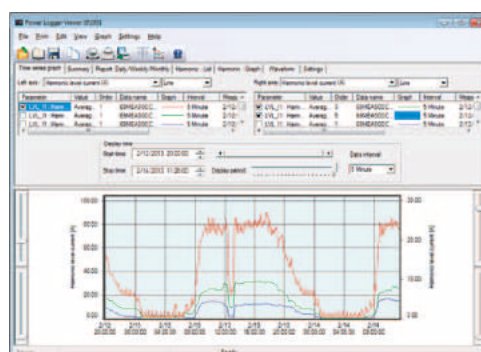




# What causes harmonics?


Many electric devices incorporate power circuits with capacitor input. Such devices have rectification circuits to convert the AC power supply to DC power, and distortion in the resulting voltage and current waveforms causes harmonics.

## Power circuits that distort waveforms



Typical power circuit

Voltage waveform and current waveform

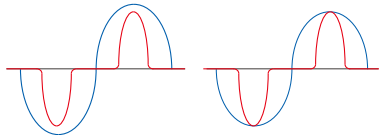


Current flows only near the peak of the voltage waveform, resulting in a voltage drop that flattens the peak portion of the voltage waveform.




## Analysis points

Waveform as measured by an instrument designed for observing harmonics

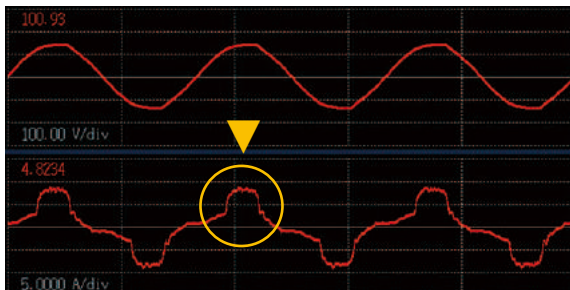

Current flows only near the peak of the voltage waveform

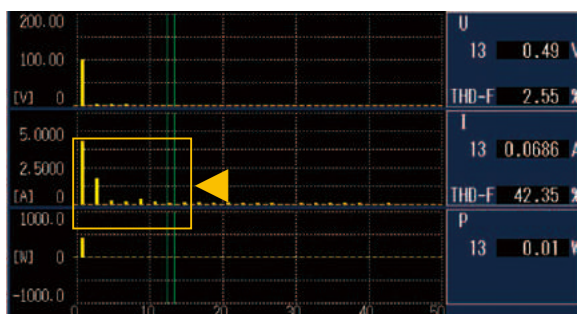

## Convenient Functions

For the  
Worksite

## More Uses for the PW3365-20


The Hioki PW3365-20 is not just a power logger. Added-value features and functions let you meet many other electrical testing applications.

## Leakage Current Measurement

Requires optional clamp-on leak sensor

## Measure power + 1-channel of leakage current

Example : 3P3W2M+1-channel leakage current

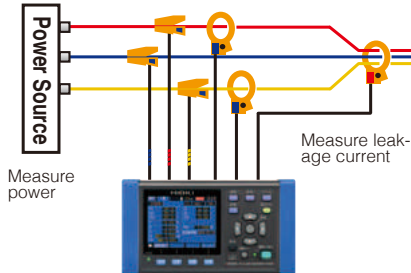

With the ability to calculate and process data every 200ms, you can do simple checks of intermittent leakage current. Choose from average, maximum and/or minimum value of the measured interval.


Leakage current results

MEAS	U/I	I3	9675	50mA
3P3W2M+1				
U1	RMS (V)	FND (V)	PEAK (V)	PHASE (deg)
U2	224.4	224.4	321.1	0.0
U12	223.3	223.3	326.0	59.9
U12	223.5	223.5	322.5	-59.9
I1	RMS (A)	FND (A)	PEAK (A)	PHASE (deg)
I2	23.420	19.984	33.475	-29.9
I12	22.079	18.952	44.459	90.3
I12	25.604	19.445	62.660	-152.5
I3	27.004m	24.924m	50.069m	59.5
	SCREEN			HOLD

By capturing the RMS of the fundamental wave, you can also identify the leakage current of the 50/60Hz component.

RMS (A) RMS that includes harmonic components  
 FND (A) RMS of fundamental wave  
 PEAK (A) Peak value (waveform peak)


## Measure 3 channels of leakage current

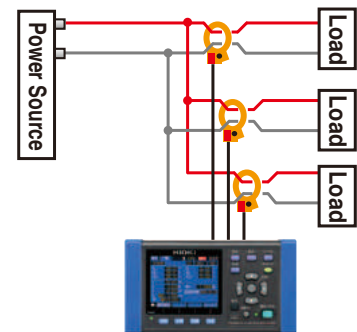


## Control and Monitor from a Remote Location

Use a LAN cable to connect the PW3365-20 to a personal computer for real-time remote monitoring and measurement display on a web browser.


Files recorded in the Clamp On Power Logger's internal memory or SD card are accessible via a LAN or USB connection, and are downloadable using the free PW3365-20 Setup and Download Software

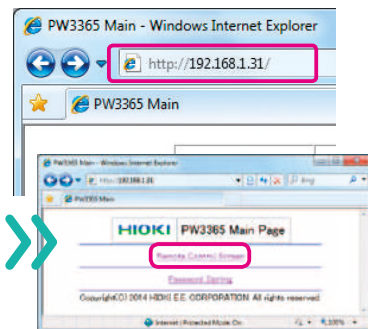

Enter the IP address in the browser.

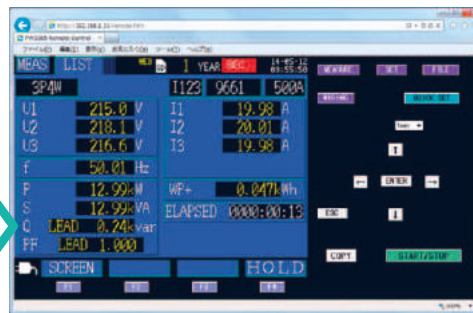


Display the power logger's screen and make adjustments virtually by clicking the buttons and entering new information.

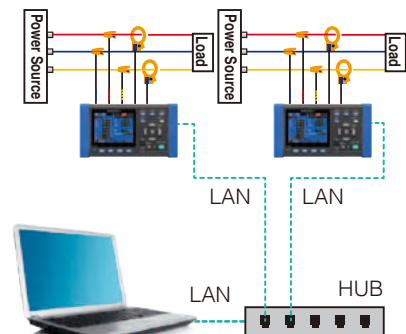

## Simultaneous Measurements

Measure three single-phase, 2-wire circuits in the same system at the same time.

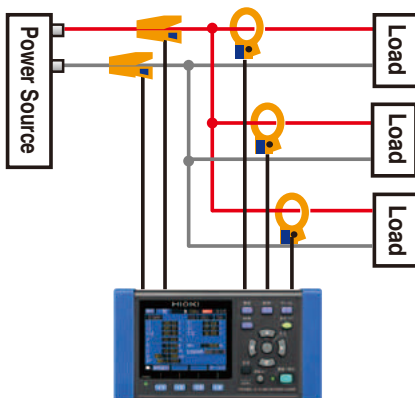

## Other Convenient Features



## Compact, lightweight

Small form factor lets you set the power logger even inside cramped cubicles

## Key lock function

Lock the buttons to prevent erroneous operation



## Battery power

Power the instrument for about five hours with batteries if the power goes out

## Display hold

Freeze the displayed value for easier reading



## Outage recovery

Resume recording automatically following recovery from a power outage



# Save & Analyze

Measurement Results  
on PC

## Easily download and interpret data on a PC

Download the measurement results to a computer via the power logger's LAN or USB interface or its SD card. Simultaneously monitor all data in real-time, control your device and download the recorded data remotely with GENNECT One software. For more detailed analysis, Hioki's optional SF1001 application software is recommended.

### Storage media for data

#### SD card 2GB

Stores up to one year's data that is acquired at one minute intervals. Performance cannot be guaranteed on storage media other than SD cards sold by Hioki.



### Loading data

#### SD card 2GB

#### LAN interface

#### USB interface



### Available Recording Time

Interval time	Save Time		Interval time	Save Time	
	Saving of harmonic data: OFF	Saving of harmonic data: ON		Saving of harmonic data: OFF	Saving of harmonic data: ON
1 seconds	15.6 days	2.8 days	30 seconds	1 year	82.9 days
2 seconds	31.2 days	5.5 days	1 minutes	1 year	165 days
5 seconds	77.9 days	13.8 days	2 minutes	1 year	331 days
10 seconds	155 days	27.6 days	5 minutes	1 year	1 year
15 seconds	233 days	41.5 days	More than 10 minutes	1 year	1 year

[ Save conditions for above figures ]

Measurement target : 3P4W


Storage media : Z4001 2-GB SD card

Saved parameters : All data: average, maximum, and minimum values

Screen copy saving : OFF Waveform save : OFF

In all cases, the maximum single file size for measurement data is about 200 MB. When this is exceeded, a new file is created and saving continues. The maximum recording period is one year.

### GENNECT One SF4000 (available as a free download from the HIOKI website)

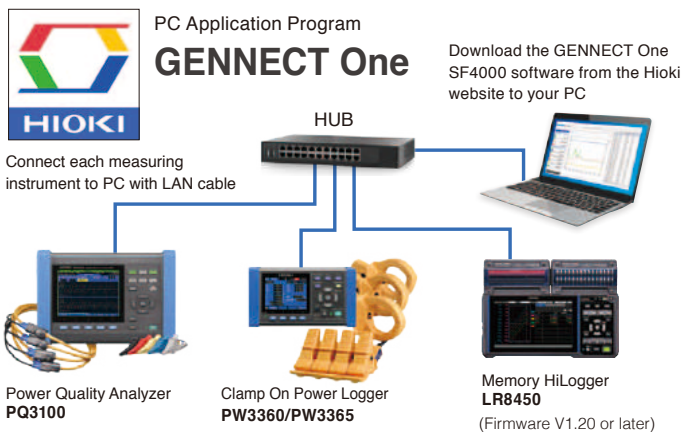

#### Remote control (HTTP)

Control and configure LAN-connected measuring instruments in remote locations from a computer


The application displays a virtual instrument and allows you to control it directly with the mouse.



You can also easily change instrument settings and control the instrument, for example to start and stop measurement

#### Real-time measurement (logging)

- Regularly (as quickly as once every second) collect measurement data from up to 15 LAN-connected measuring instruments and display it on a computer.
- Simultaneously capture power data from a power meter and temperature or flow rate data from a data logger.

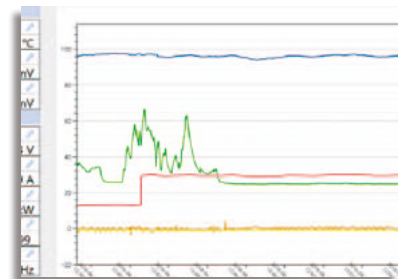


#### Automatic file transfer (FTP)

Automatically transfer measurement files from LAN-connected instruments to a computer

This function lets you acquire data in real time on a PC, including data created when the instrument's trigger is activated and measurement files that are automatically generated on a daily basis. Example uses include capturing abnormal phenomena with an instrument installed in the field and automatically acquiring daily power consumption data on a PC.

Automatically transfer measurement files to a PC.

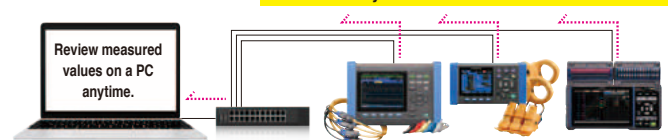

### Downloading GENNECT One SF4000 (for Windows)

HIOKI website > Search

Model No. (Order code)

SF4000

Search

Enter the model number in the search field to download the software to get started!

# Save & Analyze

Measurement Results  
on PC


## Use Hioki's Power Logger Viewer to gather, view, and compare data

Assessing the status quo is the first step in saving energy. Ascertain trends by simultaneously measuring the energy needed to maintain environmental conditions and the energy needed for production by using as many individual instruments as possible throughout plants and on individual department floors. Hioki's Power Logger Viewer SF1001 lets you download data saved at sites in the field to instruments' SD cards and internal memory to a computer to display, tabulate, analyze, and incorporate it into printed reports.


Collect data that reflects changes in multiple locations and compare to gain an understanding of the big picture

### Example data use case 1

Simultaneously measure and record loads using three PW3365s.

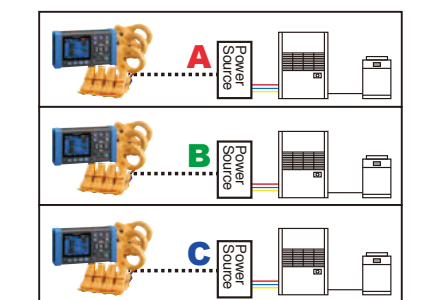

Building A

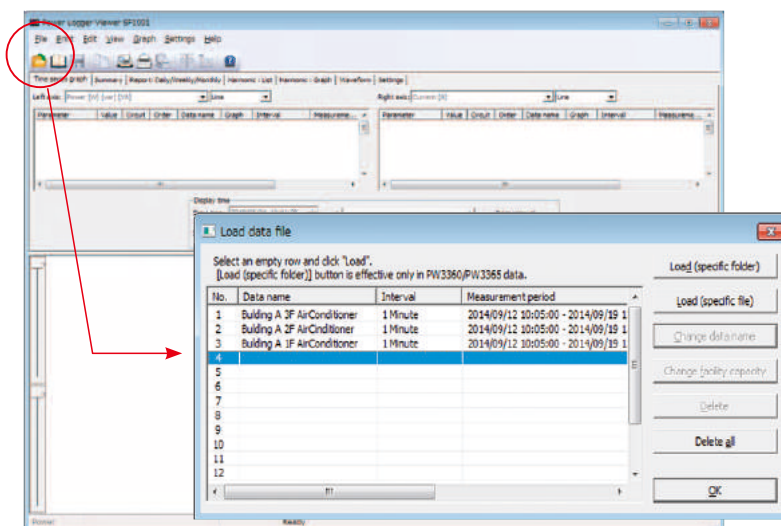

You can load data from multiple instruments.



Display easy-to-understand time-series graphs

Choose a line graph or bar graph depending on your purpose.

Consolidate data



Consolidate up to 16 sets of data into a single file so that it can be loaded more quickly.

Group power consumption data for multiple locations together and display on a single graph so that you can readily identify the times and locations that are characterized by high power consumption.

### Example data use case 2

Display data for measurements made at different times on a single graph

Functionality for changing the date associated with a set of data lets you change the time of data to facilitate comparison so that you can identify the benefits of energy-saving measures at a glance.

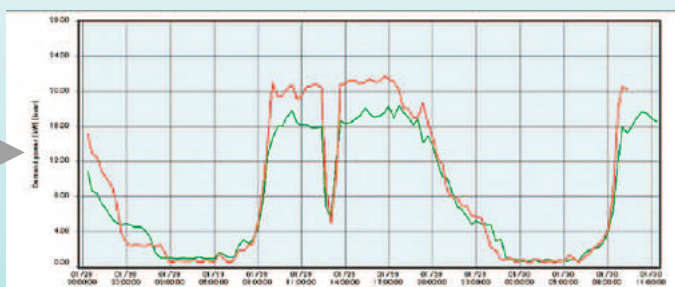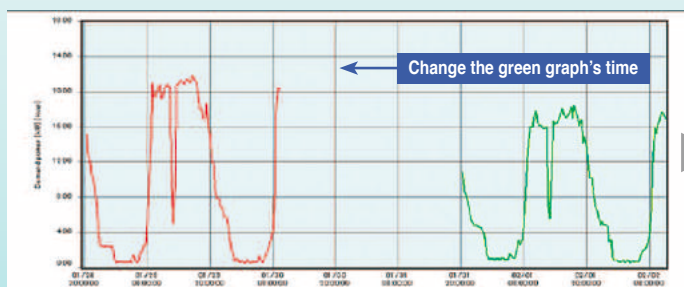



## Generate daily and weekly reports to review survey results and benefits

### Daily report

Time	Pdcm+ [kW]	WP+ [kWh]	UI [V]	U2 [V]	U12 [V]	IT [A]	IT2 [A]	IT12 [A]
00:00:00	0.959	50.9694	206.09	207.43	205.53	14.220	15.392	14.983
01:00:00	0.105	51.0215	207.13	205.41	206.71	6.425	5.514	6.461
02:00:00	4.152	53.0577	207.48	206.02	207.11	4.521	10.664	13.558
03:00:00	2.626	54.5106	207.24	205.67	206.98	10.062	11.524	10.993
04:00:00	6.050	54.5440	207.71	205.54	207.51	0.289	0.157	0.360
05:00:00	4.627	56.8078	207.45	206.59	206.94	15.817	18.247	17.021
06:00:00	2.044	57.4508	206.19	205.22	207.59	7.236	9.266	7.077
07:00:00	0.404	58.0577	206.12	205.24	207.55	1.701	1.752	1.824
08:00:00	4.596	59.3066	206.28	205.43	207.88	6.181	18.091	17.652
09:00:00	1.853	61.2024	206.66	205.27	207.98	6.102	7.039	9.639
10:00:00	0.590	61.4820	207.59	205.11	207.93	2.970	2.164	2.164
11:00:00	4.524	63.7441	207.63	206.80	207.53	16.319	18.296	16.703
12:00:00	1.032	64.2960	207.13	206.27	207.28	3.806	4.402	4.075
13:00:00	1.715	65.1175	206.57	207.69	206.96	6.200	9.050	9.743
14:00:00	4.069	67.1522	206.63	207.86	206.67	4.870	15.660	15.169
15:00:00	6.298	67.3012	206.16	205.63	206.59	1.189	1.219	1.223
16:00:00	2.022	68.9327	206.53	205.05	206.55	11.554	12.281	11.517
17:00:00	5.419	70.9120	206.10	207.85	206.35	12.501	14.411	12.950
18:00:00	1.862	71.2633	206.27	206.97	205.33	7.347	3.581	8.180
19:00:00	2.057	72.4520	204.83	206.69	204.07	7.842	4.409	8.484
20:00:00	2.405	73.8547	205.48	207.14	205.47	8.657	10.504	9.911
21:00:00	3.874	73.7618	204.94	206.63	204.95	13.000	15.629	14.413
22:00:00	3.581	77.2515	204.77	206.58	204.91	12.052	14.027	13.483
23:00:00	2.750	79.4260	204.44	206.45	204.79	14.659	15.405	13.349
24:00:00	4.047	81.4201	206.12	206.82	205.17	14.471	15.392	14.843
01:00:00	2.069	82.8245	204.58	206.26	204.60	10.720	12.421	11.345
02:00:00	2.796	84.1228	205.92	207.69	204.03	8.650	10.510	9.413
03:00:00	4.661	85.4512	206.03	207.79	204.09	5.953	15.387	16.378
04:00:00	5.287	89.1163	206.18	207.59	205.81	8.306	20.610	18.690
05:00:00	1.517	89.8750	205.48	207.69	205.36	4.586	15.660	15.642
06:00:00	4.039	91.2642	207.62	205.08	207.02	15.800	15.454	13.950
07:00:00	4.828	94.1583	206.10	206.40	206.70	15.800	17.284	16.257
08:00:00	3.482	95.8990	206.69	206.41	206.71	12.381	14.159	12.920
09:00:00	2.396	97.0521	206.55	207.78	207.78	8.133	10.519	9.363
10:00:00	3.426	98.7550	207.32	207.48	207.48	2.224	14.203	12.798
11:00:00	3.514	100.5550	206.81	205.58	205.58	12.580	14.621	13.264
12:00:00	9.480	102.2575	207.17	206.54	207.15	2.572	14.560	13.291
13:00:00	3.478	104.0260	207.31	206.11	207.33	2.319	14.618	13.206
14:00:00	2.047	105.7660	207.55	205.28	207.48	12.381	14.473	13.099
15:00:00	2.124	106.8210	206.80	205.49	206.78	7.800	9.592	8.193
16:00:00	1.321	107.9870	206.16	207.38	205.11	6.865	8.465	8.149
17:00:00	4.239	109.8540	206.22	207.81	206.20	15.284	17.667	15.799
18:00:00	2.556	111.1120	206.63	207.60	206.54	9.375	11.593	10.163
19:00:00	1.894	112.0260	205.93	207.43	207.43	7.543	9.577	7.919
20:00:00	1.900	113.0550	205.77	207.28	206.24	7.142	9.649	7.911
21:00:00	2.642	114.3060	206.72	206.22	206.61	5.878	11.767	10.513
22:00:00	2.896	115.7730	206.99	205.42	206.76	10.524	12.691	11.426
23:00:00	2.991	117.4280	207.82	205.19	207.44	19.486	14.987	11.429
Total	2.842		206.65	205.18	205.59	10.182	11.785	10.724
Average	5.227	117.2040	206.28	205.63	205.59	8.156	20.610	18.650
Maximum demand								
Time of maximum demand	2014/09/12 14:00:00	24:00:00	2014/09/13 04:30:00	08:00:00	2014/09/13 08:00:00	2014/09/13 14:30:00	2014/09/13 14:30:00	2014/09/13 14:30:00
Load factor	%							
Demand factor	%							
Facility capacity	[kW]	10.000						

### Weekly report

Time	Pdcm+ [kW]	WP+ [kWh]	UI [V]	U2 [V]	U12 [V]	IT [A]	IT2 [A]	IT12 [A]
00:00:00	2.142	117.2040	206.05	208.18	208.57	10.182	11.785	10.724
01:00:00	2.950	118.1510	206.50	207.88	208.57	10.773	12.591	11.240
02:00:00	3.617	120.5560	206.28	207.77	208.25	10.978	12.888	11.869
03:00:00	3.284	120.9200	206.81	207.46	209.93	12.241	14.407	12.293
04:00:00	2.078	122.1440	206.27	207.52	209.02	10.900	12.411	11.491
05:00:00	2.683	121.8260	206.70	207.98	209.40	9.213	10.720	9.882
06:00:00	5.084	124.2260	207.84	208.41	208.76	8.383	9.476	8.664
Total	2.890		206.49	207.89	209.30	10.443	12.185	11.169
Average	5.667	518.3920	206.80	208.14	208.99	19.980	22.177	19.213
Maximum demand								
Time of maximum demand	2014/09/14 12:30:00	2014/09/14 13:00:00	2014/09/14 04:30:00	08:00:00	2014/09/14 08:00:00	2014/09/14 12:30:00	2014/09/14 12:30:00	2014/09/14 12:30:00
Load factor	%							
Demand factor	%							
Facility capacity	[kW]	10.000						

Date	Time	Pdcm+ [kW]	WP+ [kWh]
Average		2.990	
Maximum demand		5.667	518.3920
Time of maximum demand	2014/09/14 12:30:00		2014/09/14 13:00:00
Load factor	%	52.75	
Demand factor	%	56.67	
Facility capacity	[kW]	10.000	

## Example data format

### Choose from four display formats

#### Form

Display data for a user-specified interval as a summary form.

#### Daily report

Tabulate data by demand time and display a form summarizing a one-day period.

#### Weekly report

Tabulate data by day and display a form summarizing a one-week period.

#### Monthly report

Tabulate data by day and display a form summarizing a one-month period.

### Check average and maximum values as well as the time at which the maximum value occurred

(Maximum values for daily, weekly, and monthly reports indicate maximum values as tabulated by demand time.)

When demand power is selected, the following quantities are calculated:

### Load rate and demand rate

#### WP+ [kWh]: Active energy


Active energy (consumption) from the start of recording

#### Pdcm+ [kW]: Active power demand value


Average active power value (consumption) for each interval

## Display harmonics and waveform data, convert to CSV format, and save screenshots

Configure the PW3365's recording settings to save harmonic data and display harmonics using the SF1001.

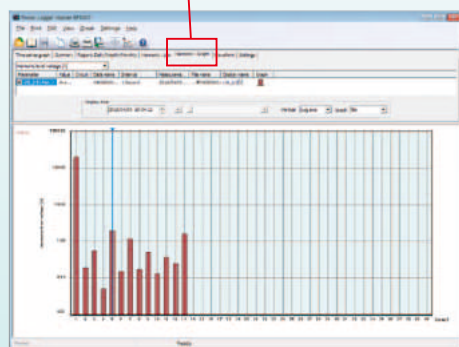


Configure the PW3365's settings to save waveforms and display them using the SF1001.

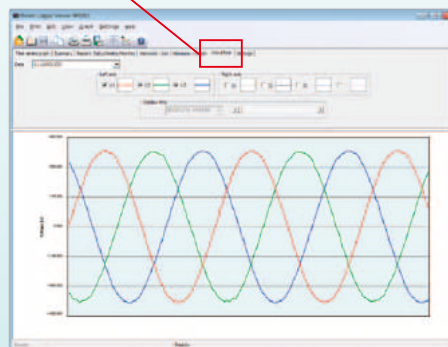

Convert binary data and save as a CSV file.


#### Binary format

- Harmonic data
- Waveform data

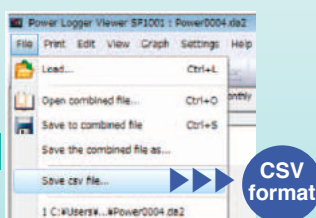

#### CSV format

Save screen shots and paste into other software or print.

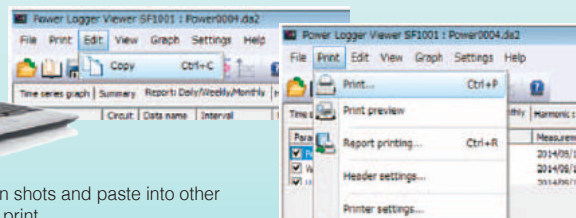

# PW3365-20 Specifications

No dirt or moisture on insulated wire or voltage sensor,  
(Accuracy guaranteed for 1 year, Post-adjustment accuracy guaranteed for 6 months)

Measurement				
Number of input channels		Voltage: 3 channels / Current: 3 channels		
Measurement targets (50/60Hz)		Single-phase 2-wire (1P2W, 1P2W × 2 circuits, 1P2W × 3 circuits) Single-phase 3-wire (1P3W, 1P3W+I, 1P3W1U, 1P3W1U+I) Three-phase 3-wire (3P3W2M, 3P3W2M+I, 3P3W3M/Y-wiring only) Three-phase 4-wire (3P4W), Current only: 1 to 3 channels		
Simultaneous power/current measurement modes		1P3W+I : 1 power circuit and 1 current channel 3P3W2M+I : 1 power circuit and 1 current channel		
Measurement items	Voltage	RMS value, fundamental wave value, waveform peak (absolute value), fundamental wave phase angle, frequency (U1)		
	Current	RMS value, fundamental wave value, waveform peak (absolute value), fundamental wave phase angle		
	Power	Active power, reactive power, apparent power, power factor, (with lag/lead display) or displacement power factor (with lag/lead display), active energy (consumption, regeneration, regeneration), reactive energy(lag, lead) Energy cost display (per-kWh price × power consumption)		
	Demand	Active power demand value (consumption, regeneration), reactive power demand value (lag, lead), active power demand quantity (consumption, regeneration), reactive power demand quantity (lag, lead), power factor demand value		
	Harmonics	Harmonic voltage, harmonic current, voltage total harmonic distortion (THD-F or THD-R), current total harmonic distortion (THD-F or TDH-R)		
Voltage range		Display range: 5 V to 520 V (less than 5 V displays as 0 V) (harmonic voltage value of 0 indicated for all orders when voltage RMS value is 0) Effective measurement range: 90 V rms to 520 V rms, peak: ±750 V peak [OVER] indicates over-range warning		
Current ranges	Load current	CLAMP ON SENSOR 9660		: 5/10/50/100 A
		CLAMP ON SENSOR 9661		: 5/10/50/100/500 A
		CLAMP ON SENSOR 9669		: 100/200/1 kA
		CLAMP ON SENSOR 9694		: 500 m/1/5/10/50 A
		CLAMP ON SENSOR 9695-02		: 500 m/1/5/10/50 A
		CLAMP ON SENSOR 9695-03		: 5/10/50/100 A
		AC FLEXIBLE CURRENT SENSOR CT9667-01, -02, -03		: 50/100/500 A (500A range)
		AC FLEXIBLE CURRENT SENSOR CT9667-01, -02, -03		: 500/1 k/5 k A (5000A range)
	Leakage current	LEAK CLAMP ON SENSOR 9675		: 50 m/100 m/500 m/1/5 A
		LEAK CLAMP ON SENSOR 9657-10		: 50 m/100 m/500 m/1/5 A
		Total display range: Within 0.4 to 130% of the range (zero is suppressed for less than 0.4%) (harmonic current value of 0 indicated for all orders when current RMS value is 0) Effective measurement range: Within 5 to 110% of the range [OVER] indicates over-range warning		
Power ranges		200.00 W to 6.0000 MW Depends on voltage/current combination and measured line type (see Measurement Range Configuration Tables) Total display range: Within 0 to 130% of the range (“0W” display indicates zero rms voltage and/or current) Effective measurement area: Within 5 to 130% of the range		
Measurement accuracy (50/60Hz)		Voltage : ±1.5% rdg. ±0.8 V (combined accuracy with PW3365-20 + PW9020) Current : ±0.3% rdg. ±0.1% f.s. + clamp sensor accuracy Active power : ±2.0% rdg. ±0.3% f.s. + clamp sensor accuracy (power factor = 1)		
Calculations		RMS calculation/ fundamental wave calculation		
VT ratio settings		Any	0.01 to 9999.99	Selections 1/60/100/200/300/600/700/1000/2000/2500/5000
CT ratio settings		Any	0.01 to 9999.99	Selections 1/40/60/80/120/160/200/240/300/400/600/800/1200
Input methods		Voltage: Isolated inputs using Voltage Sensor PW9020    Current: Isolated input using a clamp-on sensor		
Display update rate		Approx. 0.5 sec (except when accessing SD card or internal memory, or during LAN/USB communication)		
Measurement method		Digital sampling and zero cross synchronization calculation method Sampling: 10.24 kHz (2048 points) Calculation processing 50 Hz: Continuous, gapless measurement at 10 cycles 60 Hz: Continuous, gapless measurement at 12 cycles		

\*1 For individual clamp sensors' accuracy and combined accuracy figures, see pages 14 and 15.

Harmonic Specifications				
Standard	IEC 61000-4-7:2002 (but without harmonics for intermediate orders)			
Window width	50 Hz: 10 cycles; 60 Hz: 12 cycles (with interpolation)			
Analyzed orders	Up to 13th order			
Analysis parameters	Harmonic levels: Voltage and current harmonic level for each order (With 3P3W2M connection, U12 and I12, which are calculated as part of third channel computations, are not displayed.) Harmonic content percentages: Voltage and current content percentages for each order; total harmonic distortion: voltage and current (THD-F or THD-R)			
Measurement accuracy	Harmonic level Voltage    PW3365 alone: ±5% rdg. ±0.2% f.s. Combined accuracy for PW3365 and PW9020: ±30% rdg. ±3% f.s. (input for each order up to 5% of the fundamental wave, THD-F up to 10%) Current    ±5% rdg. ±0.2% f.s. + sensor accuracy Total harmonic distortion: Accuracy not defined			



Screen Display	
List	Voltage, current, frequency, active/apparent/reactive power power factor, integrated power use, elapsed time
U/I	RMS value, fundamental wave value, waveform peak, phase angle
Power	Per-channel and total active power, apparent power, reactive power, power factor
Integ	Active energy, reactive energy, recording start time recording stop time, elapsed time, energy cost
Demand	Active power demand value, reactive power demand value power factor demand value
Waveform	Displays voltage and current waveform
Zoom	Enlarged view of 4 user-selected parameters
Trend	For one selected measurement item (not including harmonics other than demand and THD) displays maximum, average and minimum values
Harmonics	Displays voltage and current levels and content percentages as a graph or list

Recording	
Save destination	SD Card, internal memory (capacity: approx. 320 KB)
Save interval time	1/2/5/10/15/30 seconds, 1/2/5/10/15/20/30/60 minutes Available storage time is displayed on the PW3365-20's setting screen
Save items	Measurement save : Average only/all (without harmonics) Average only/all (with harmonics) Screen save : Saves the displayed screen as a BMP at a fixed interval* <sup>1</sup> Waveform save : Stores binary waveform data* <sup>2</sup>
Recording start methods	Interval time, manual, or at specified time, repeat
Recording stop methods	Manual, or at specified time (up to one year), timer

\*<sup>1</sup> The minimum interval time for saving screen copies is 5 min. If the setting is less than 5 min., screen copies will be saved every 5 min.

\*<sup>2</sup> With shortest interval of 1 minute. When set to less than 1 minute, waveforms are saved once every minute

External Interfaces	
SD card	Settings data, measurement data, screen data, waveform data
LAN	100BASE-TX IEEE802.3 Compliance - HTTP server function, FTP server function
USB	USB Ver 2.0, Windows 10 (32/64bit)/Windows 8 (32/64bit)/ Windows 7 (32/64bit) / Vista (32bit) / XP - When connected to a computer, the SD Card and internal memory are recognized as removable storage devices.

General	
Product guarantee	3 year
Display	3.5 inch TFT color LCD (320 × 240 pixel) Japanese, English, Chinese, Korean, German, Italian, French, Spanish, Turkish Backlight auto-off function (after 2 minutes) When AUTO OFF is active, the Power LED blinks
Operating environment	Indoors, Pollution degree 2, altitude up to 2000 m (6562-ft.)
Operating temperature and humidity (no condensation)	-10°C to 50°C (14°F to 122°F), 80% RH or less During battery operation: 0°C to 40°C (32°F to 104°F), 80% RH or less During battery charging: 10°C to 40°C (50°F to 104°F), 80% RH or less
Storage temperature and humidity (no condensation)	0°C to 60°C (32°F to 140°F), 80% RH or less However, the battery's storage temperature range is -10°C to 30°C (14°F to 86°F)
Maximum rated voltage between terminals	Voltage input section : 1.7 VAC, 2.4 Vpeak Current input section : 1.7 VAC, 2.4 Vpeak
Maximum rated voltage to earth	Voltage input section: 600V Measurement Category III 300V Measurement Category IV Current input section: Depends on clamp sensor in use.
Dielectric strength	7.06 kVrms AC
Applicable standards	Safety: EN61010, EMC: EN61326
Power supply	(1) Z1008 AC Adapter : 100 V AC to 240 V AC Maximum rated power : 45 VA (including AC adapter) (2) Model 9459 Battery Pack : Ni-MH DC7.2 V 2700 mAh Continuous battery operation time Approx. 5 hr. Maximum rated power : 3 VA
Charge function	Charge time: Max. 6 hr. 10 min. (reference value at 23°C) Charges the battery regardless of whether the instrument is on or off
Backup battery life	Clock and settings (Lithium battery), Approx. 10 years @23°C (@73.4°F)
Dimensions	Approx. 180W(7.09") × 100H(3.94") × 48D (1.89") mm (without PW9002) Approx. 180W(7.09") × 100H(3.94") × 68D (2.68") mm (with PW9002)
Mass	Approx. 540g (19 oz) (without PW9002), Approx. 820g (28.9 oz) (with PW9002)
Accessories	SAFETY VOLTAGE SENSOR PW9020 (4) AC ADAPTER Z1008 (1) USB cable (1) Instruction manual (1) Measurement guide (1) Red, yellow, blue and white color clips (4 each) Spiral tubes (10)

## POWER LOGGER VIEWER SF1001 Specifications

Functions	
Trend graph display function	Display items Voltage, current, active power, reactive power, apparent power, power factor, frequency, integrated active power, integrated reactive power, demand volume, demand value, voltage disequilibrium factor
	Stacked bar graph display : Up to 16 types of data series
	Cursor measurements Measurement values can be displayed by the cursor
Summary display function	Displayed items are the same as for the trend Graph Display
	Daily, weekly and monthly report displays: Accumulates and displays daily, weekly and monthly reports over specified period.
	Load factor calculation display: Calculates and displays load factor and demand factor results with daily, weekly and monthly reports
	Time span aggregation: Aggregates data into up to four specified time spans
Waveform display	Displays waveform data at specified date and time
Copy function	Captures any display image to the clipboard

Print function	Preview and print content shown on the trend graph, report, harmonic graph and settings displays.
	Comment entry (Text comments can be entered in any printout)
	Header/Footer settings: Sets the header and footer for each printout
	Printing support Any color or monochrome printing supported by the operating system
Report printing	Print (static) contents over a specific time period
	Output contents: Standard or selected output items
	Available output items: Trend graph, summary, daily report, waveform
	Report creation method: Standard print Report output settings: Save/load report output settings

General Specifications	
Supported models	PW3365-20 / PW3360-20 / PW3360-21 LR5000 series ; Data previously loaded by the LR5000 Utility (.hnp2 format) using a PC
Supported computer operating systems	Windows 10 (32/64bit) Windows 8 (32/64bit) Windows 7 SP1 or later (32/64bit)

# Current CLAMP



CLAMP ON SENSOR  
9694

Cord length  
3 m (9.84ft)



CLAMP ON SENSOR  
9660

Cord length  
3 m (9.84ft)



CLAMP ON SENSOR  
9661

Cord length  
3 m (9.84ft)



CLAMP ON SENSOR  
9669

Cord length  
3 m (9.84ft)



CLAMP ON SENSOR  
9695-02

Connect with the 9695-02/-03,  
Output BNC terminal  
Cord length: 3 m (9.84ft)



CLAMP ON SENSOR  
9695-03

CONNECTION CORD  
9219

## Measurable conductor diameter

φ15 mm (0.59")

φ15 mm (0.59")

φ46 mm (0.81")

φ55 mm (2.17")  
80 (3.15")×20 (0.79") mm

φ15 mm (0.59")

φ15 mm (0.59")

## Primary current rating

5 A AC

100 A AC

500 A AC

1000 A AC

50 A AC

100 A AC

## Accuracy Amplitude (45 to 66 Hz) / Phase (45 Hz to 5 kHz)

±0.3% rdg.±0.02% f.s.

±0.3% rdg.±0.02% f.s.

±0.3% rdg.±0.01% f.s.

±1.0% rdg.±0.01% f.s.

±0.3% rdg.±0.02% f.s.

±0.3% rdg.±0.02% f.s.

Within ±2°

Within ±1°

Within ±0.5°

Within ±1°

Within ±2°

Within ±1°

## Frequency characteristic 40Hz to 5kHz

Within ±1.0%

Within ±1.0%

Within ±1.0%

Within ±2.0%

Within ±1.0%

Within ±1.0%

## Effect of external magnetic field with a magnetic field of 400 A/ m AC

Equivalent to 0.1 A or less

Equivalent to 0.1 A or less

Equivalent to 0.1 A or less

Equivalent to 1 A or less

Equivalent to 0.1 A or less

Equivalent to 0.1 A or less

## Effect of conductor position

Within ±0.5%

Within ±0.5%

Within ±0.5%

Within ±1.5%

Within ±0.5%

Within ±0.5%

## Maximum rated voltage to earth

CAT III 300 V rms

CAT III 300 V rms

CAT III 600 V rms

CAT III 600 V rms

CAT III 300 V rms

CAT III 300 V rms

## Maximum input 45-66 Hz

50 A continuous

130 A continuous

550 A continuous

1000 A continuous

60 A continuous

130 A continuous

## Dimensions / Mass

46W × 135H × 21D mm / 230 g  
(1.81") × (5.31") × (0.83") / (8.1 oz)

46W × 135H × 21D mm / 230 g  
(1.81") × (5.31") × (0.83") / (8.1 oz)

77W × 151H × 42D mm / 380 g  
(3.03") × (5.94") × (1.65") / (13.4 oz)

99.5W × 188H × 42D mm / 590 g  
(3.92") × (7.40") × (1.65") / (20.8 oz)

50.5W × 58H × 18.7D mm / 50 g  
(2.28") × (2.28") × (0.74") / (1.8 oz)

50.5W × 58H × 18.7D mm / 50 g  
(2.28") × (2.28") × (0.74") / (1.8 oz)



CT9667-01

CT9667-02  
AC FLEXIBLE CURRENT SENSOR

CT9667-03

Cord length : Sensor - circuit: 2 m (6.56ft) , Circuit - connector: 1 m (3.28ft)



CLAMP ON LEAK SENSOR  
9657-10

Leakage Current Measurement Only  
Cord length : 3 m (9.84ft)



CLAMP ON LEAK SENSOR  
9675

Leakage Current Measurement Only  
Cord length : 3 m (9.84ft)

## Measurable conductor diameter

CT9667-01 : φ100 mm, CT9667-02 : φ180 mm  
CT9667-03 : φ254 mm

## Primary current rating

AC500 A/ AC5000 A (Switchable)

## Accuracy 45-66Hz

±2.0% rdg ± 0.3% f.s. / Within ±1°

## Frequency 10-20kHz

Within ± 3dB

## Effect of external magnetic field

1.5% / f.s. or less

## Effect of conductor position

Within ± 3%

## Maximum rated voltage to earth

CAT III 1000 V rms / CAT IV 600 V rms

## Maximum input 45-66Hz

10000 A continuous

## Dimensions / Mass

Circuit box: 35W × 120.5H × 34D  
CT9667-01, -02 : 280 g, CT9667-03 : 470 g

## Power supply

LR06 alkaline battery × 2 or  
AC ADAPTER 9445-02/9445-03 (optional)

## Measurable conductor diameter

φ40 mm

## Primary current rating

AC 10 A \*

## Accuracy

±1.0% rdg ±0.05% f.s. / Within ±3°

## Frequency 40 - 5kHz

Within ± 5%

## Effect of external magnetic field

7.5 mA max.

## Effect of conductor position

Within ±0.1%

## Measurable conductor

Insulated conductor

## Maximum input 45-66Hz

30A continuous

## Dimensions / Mass

74W × 145H × 42D / 380g

## Notes

Not used for power measurements  
\*Maximum AC measurement range with  
PW3365-20 is 5 A

φ30 mm

AC 10 A \*

±1.0% rdg ±0.05% f.s. / Within ±5°

Within ± 5%

7.5 mA max.

Within ±0.1%

Insulated conductor

10A continuous

60W × 112.5H × 23.6D / 160g

Not used for power measurements  
\*Maximum AC measurement range with  
PW3365-20 is 5 A



## Measurement Range Configurations

CLAMP ON SENSOR 9694 / 9695-02 *1						
Voltage	Connection	Current				
		500.00 mA	1.0000 A	5.0000 A	10.000 A	50.000 A
400.0 V	1P2W	200.00 W	400.00 W	2.0000 kW	4.0000 kW	20.000 kW
	1P3W 1P3W1U 3P3W2M 3P3W3M	400.00 W	800.00 W	4.0000 kW	8.0000 kW	40.000 kW
	3P4W	600.00 W	1.2000 kW	6.0000 kW	12.000 kW	60.000 kW

CLAMP ON SENSOR 9660 / 9695-03 / 9661*2						
Voltage	Connection	Current				9661 only
		5.0000 A	10.000 A	50.000 A	100.00 A	500.00 A
400.0 V	1P2W	2.0000 kW	4.0000 kW	20.000 kW	40.000 kW	200.00 kW
	1P3W 1P3W1U 3P3W2M 3P3W3M	4.0000 kW	8.0000 kW	40.000 kW	80.000 kW	400.00 kW
	3P4W	6.0000 kW	12.000 kW	60.000 kW	120.00 kW	600.00 kW

CLAMP ON SENSOR 9669				
Voltage	Connection	Current		
		100.00 A	200.00 A	1.0000 kA
400.0 V	1P2W	40.000 kW	80.000 kW	400.00 kW
	1P3W 1P3W1U 3P3W2M 3P3W3M	80.000 kW	160.00 kW	800.00 kW
	3P4W	120.00 kW	240.00 kW	1.2000 MW

AC FLEXIBLE CURRENT SENSOR CT9667-01, -02, -03 (5 kA)				
Voltage	Connection	Current		
		500.00 A	1.0000 kA	5.0000 kA
400.0 V	1P2W	200.00 kW	400.00 kW	2.0000 MW
	1P3W 1P3W1U 3P3W2M 3P3W3M	400.00 kW	800.00 kW	4.0000 MW
	3P4W	600.00 kW	1.2000 MW	6.0000 MW

AC FLEXIBLE CURRENT SENSOR CT9667-01, -02, -03 (500 A)				
Voltage	Connection	Current		
		50.00 A	100.00 A	500.00 A
400.0 V	1P2W	20.000 kW	40.000 kW	200.00 kW
	1P3W 1P3W1U 3P3W2M 3P3W3M	40.000 kW	80.000 kW	400.00 kW
	3P4W	60.000 kW	120.00 kW	600.00 kW

Leak current: CLAMP ON LEAK SENSOR 9657-10, 9675	
Range	50.000 mA/ 100.00 mA/ 500.00 mA/ 1.0000 A/ 5.0000 A

## Combined Accuracy PW3365-20 + PW9020 + clamp sensors

Range	9694	9695-02
50.000 A	-	±2.3% rdg. ±0.32% f.s.
10.000 A	-	±2.3% rdg. ±0.4% f.s.
5.0000 A	±2.3% rdg. ±0.32% f.s.	±2.3% rdg. ±0.5% f.s.
1.0000 A	±2.3% rdg. ±0.4% f.s.	±2.3% rdg. ±1.3% f.s.
500.00 mA	±2.3% rdg. ±0.5% f.s.	±2.3% rdg. ±2.3% f.s.

Range	9660, 9695-03	9661
500.00 A	-	±2.3% rdg. ±0.31% f.s.
100.00 A	±2.3% rdg. ±0.32% f.s.	±2.3% rdg. ±0.35% f.s.
50.000 A	±2.3% rdg. ±0.34% f.s.	±2.3% rdg. ±0.4% f.s.
10.000 A	±2.3% rdg. ±0.5% f.s.	±2.3% rdg. ±0.8% f.s.
5.0000 A	±2.3% rdg. ±0.7% f.s.	±2.3% rdg. ±1.3% f.s.

Range	9669
1.0000 kA	±3% rdg. ±0.31% f.s.
200.00 A	±3% rdg. ±0.35% f.s.
100.00 A	±3% rdg. ±0.4% f.s.

Range	CT9667-01, -02, -03 5.000kA range	CT9667-01, -02, -03 500A range
5.0000 kA	±4% rdg. ±0.6% f.s.	-
1.0000 kA	±4% rdg. ±1.8% f.s.	-
500.00 A	±4% rdg. ±3.3% f.s.	±4% rdg. ±0.6% f.s.
100.00 A	-	±4% rdg. ±1.8% f.s.
50.000 A	-	±4% rdg. ±3.3% f.s.

Conditions of guaranteed accuracy	After 30 minute warm-up, with 50/60 Hz sine wave input voltage to earth 400V or less
Temperature and humidity for guaranteed accuracy	23°C ±5°C (73 ± 9°F), 80%RH or less (applies to all specifications unless otherwise noted)
Display area of guaranteed accuracy	Effective measurement range
Real-time clock accuracy	Within ±0.3 sec/day (with power on, within specified operating temperature and humidity ranges)
Temperature characteristic	Within ±0.1% f.s./ °C (except 23±5°C)
Effect of external magnetic field	Within ±1.5% f.s. (in a magnetic field of 400 A/m rms AC, 50 Hz/60 Hz)
Effect of radiated, radio-frequency, electromagnetic field	Within ±5% f.s. for voltage and active power at 10 V/m

Apparent power	±1 dgt. for the calculation obtained from each measurement value
Reactive power	Fundamental waveform calculations ±2.0% rdg. ±3.0% f.s. + clamp-on sensor accuracy (w/power factor = 1)
	Rms calculations From each measurement applied to calculation ±1 dgt.
Energy	Active and reactive power measurement accuracies ±1 dgt.
Power factor	From each measurement applied to calculation ±1 dgt.
Frequency	±0.5% rdg. (with 90 to 520 V sine wave input)
Demand value	Active and reactive power measurement accuracies ±1 dgt.
Demand quantity	Active and reactive power measurement accuracies ±1 dgt.

\*1 For the 9694 sensor, the range of guaranteed accuracy is from 500 mA to 5 A, and for the 9695-02, from 500 mA to 50 A.

\*2 For the 9660 and 9695-03 sensors, the range of guaranteed accuracy is from 5 A to 100 A and for the 9661, from 5 A to 500 A.

## Current Display and Effective Measurement Ranges

typical

	Range	Total display range	Effective measurement range		Total display range	Effective peak
		Minimum	Minimum	Maximum	Maximum	Range
Voltage	400 V Range	5.0 V	90.0 V	520.0 V	520.0 V	±750 V peak
Current	5 A Range	0.0200 A	0.2500 A	5.5000 A	6.5000 A	±20 A peak
	10 A Range	0.040 A	0.500 A	11.000 A	13.000 A	±40 A peak
	50 A Range	0.200 A	2.500 A	55.000 A	65.000 A	±200 A peak
	100 A Range	0.40 A	5.00 A	110.00 A	130.00 A	±400 A peak
	500 A Range	2.00 A	25.00 A	550.00 A	650.00 A	±1000 A peak



## Accessories

- SAFETY VOLTAGE SENSOR PW9020 x4
- AC ADAPTER Z1008 x1
- USB cable (0.9 m, 2.95 ft length) x1
- Instruction manual x1
- Measurement guide x1
- Color clips (red, green, yellow, white) 4 each
- Spiral tubes x10



### Model : CLAMP ON POWER LOGGER PW3365

Model No. (Order Code) (Note)

PW3365-20 (English model, main unit only)

Clamp On Power Logger PW3365-20 by itself does not support current and power measurements. Current and power measurements require clamp on sensors, sold separately. Use only HIOKI SD cards guaranteed to work for saving measurement data (options, sold separately).

## Options

### CLAMP ON SENSOR (for load current measurement)


CLAMP ON SENSOR	9694	(AC 5 A)
CLAMP ON SENSOR	9660	(AC 100 A)
CLAMP ON SENSOR	9661	(AC 500 A)
CLAMP ON SENSOR	9669	(AC 1000 A)
AC FLEXIBLE CURRENT SENSOR	CT9667-01	(AC 500 A/ 5000 A)
AC FLEXIBLE CURRENT SENSOR	CT9667-02	(AC 500 A/ 5000 A)
AC FLEXIBLE CURRENT SENSOR	CT9667-03	(AC 500 A/ 5000 A)
CLAMP ON SENSOR (Not CE marked) *	9695-02	(AC 50 A)
CLAMP ON SENSOR (Not CE marked) *	9695-03	(AC 100 A)
CONNECTION CORD	9219	(for connection to 9695-02, 9695-03)

\* When purchasing the 9695-02 and 9695-03, we recommend also purchasing the separately sold 9219 Connection Cord.

### CLAMP ON LEAK SENSOR (for leakage current measurement)

CLAMP ON LEAK SENSOR	9657-10
CLAMP ON LEAK SENSOR	9675


### CLAMP ON ADAPTER 9290-10

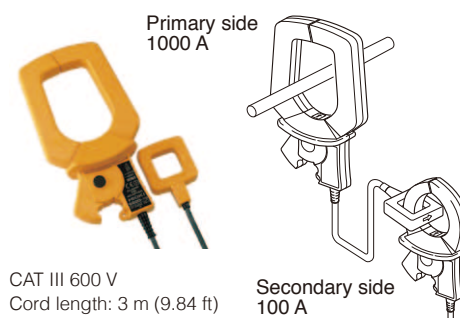

### Measurable conductor diameter

φ55 mm (2.17 in)  
 Bus bar : 80 mm (3.46 in) 5 20 mm (0.79 in)  
 CT ratio : 10:1  
 MAX. 1500 A AC (continuous: 1000 A)

### POWER LOGGER VIEWER SF1001

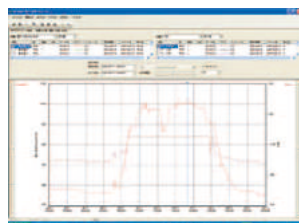

#### Supported computer operating systems

Trend graph display function  
 Summary display function  
 Waveform display, Print function  
 Report printing

### BATTERY SET PW9002



Battery Case and Battery Pack Set

#### BATTERY PACK 9459

For purchase as replacement battery pack

### SAFETY VOLTAGE SENSOR PW9020



PW3365-20 is bundled with 4 sensors  
 Additional single sensors also available  
 Cord length: 3 m (9.84 ft)

### CARRYING CASE C1005/C1008



C1005	C1008
Dimension : 390W (15.4") (Approx)	390W (15.4")
275H (10.8")	275H (10.8")
110D (4.3") mm	150D (5.9") mm

### AC ADAPTER Z1008



Includes standard  
 For separate purchase

### SD MEMORY CARD Z4003



8 GB capacity

Stores up to one year's data when acquired at one minute intervals. Performance cannot be guaranteed on storage media other than Hioki-specified SD card options.

### SD MEMORY CARD 2GB Z4001



2 GB capacity

### LAN CABLE 9642



Straight Ethernet cable, supplied with straight to cross conversion adapter, 5 m (16.41 ft) length

Note: Company names and product names appearing in this catalog are trademarks or registered trademarks of various companies.

DISTRIBUTED BY

**HIOKI**  
 HIOKI E. E. CORPORATION

#### HEADQUARTERS

81 Koizumi,  
 Ueda, Nagano 386-1192 Japan  
<https://www.hioki.com/>



Scan for all  
 regional contact  
 information