

ECG-KOKUSAI

Various measurement hardware and inspection equipment | Impulse winding tester

[HOME](#)[PRODUCTS](#)[TECHNOLOGY](#)[COMPANY](#)[INQUIRY](#)

PRODUCTS

Based on the technology cultivated through the development of impulse Winding tester and other products, we will continue to propose **an easy to use inspection device**.

[HOME](#) > [PRODUCTS](#) > Impulse winding teter DWX Series > DWX-01A、05A、10A

Products Lineup

Coil tester



Impulse Winding tester

- DWX-01A、05A、10A
- DWX-300LI、DWX-01LI
- DWX -10LI
- DWX -15、DWX-15PD
- WT-1303
- Performance comparison table
- EtherNet Adoptor

Comprehensive testing machine

- Amateur coil
- Stator coil
- WTX-type II

Coil tester

Impulse Winding Tester **DWX Series**

DWX-01A (1000V) - 05A (5000V) - 10A(10000V)

Definitive low inductance coil test!

Clear waveform display of 10μH coil

With the advance requirement of miniaturization and high frequency technology of coil products, the DWX tester is designed to test other coils and low inductance coils used in high end electronic components . Through the use of impulse power source with high speed switch , highly efficient input circuit, and high speed A/D sampling circuit, the DWX tester can offer a new solution to the low inductance coil tests.

•AWX-05S

•WTS-05

Discharge
testing machine



Inductor testing
machine



Unusual sound and vibration
testing
machine



Others



Test Labo

Trust examination



Technology

FAQ and Manual



Features

Overview

Specifications

DWX Series Features


Inquiry



Inquiry , Support, Repair,
The request for the demonstration

TEL +81 (0)42-554-5383

FAX +81 (0)42-555-7380

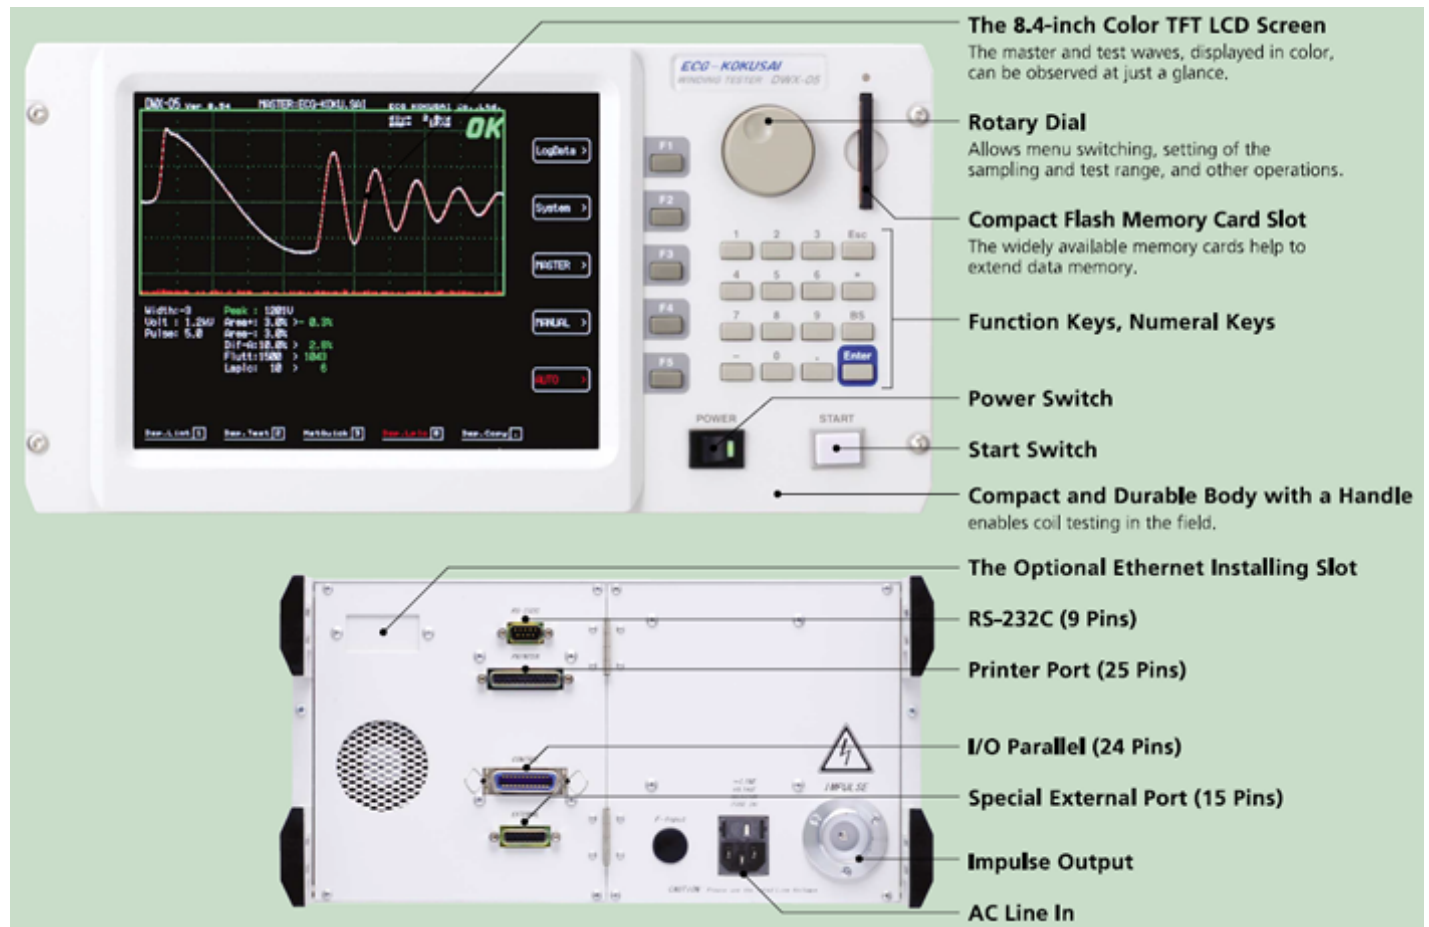

● This innovative tester offers a news solution for low inductance coil test.

With the advanced requirement of miniaturization and high frequency technology of coil production, the DWX tester is designed to test other coils and low inductance coils used in high-end electronic components. Through the use of impulse power source with high-speed switch, highly efficient input circuit, and high-speed A/D sampling circuit, the DWX tester can offer a new solution to the low inductance coil tests.

● Its advanced technology allows a complete waveform and partial discharge observation by the resistive voltage divider.

The high performance voltage divider allows the DWX input circuit of impulse waveform to generate a complete wave pattern without any distortion. At the same time, it also helps improve the partial discharge sensitivity and detection capability

(The DWX's detection sensitivity is improved compared with that of our DW & DWS series, except for the DW-9505F).

- **Its high sampling rate of 100 MHz delivers highly sensitive and precise test.**

Its high-speed A/D sampling helps to verify the extremely short impulse response of the low inductance coil. At the same time, the 8 kByte sampling, with highly refined data analysis, can precisely capture the subtle difference in the wave patterns.

- **The partial discharge amount calculated by the Laplacian method is displayed clearly in a separate sub-window.**

The employed Laplacian method calculates the partial discharge (PD) generated by high voltage impulse. This PD, abstracted from the voltage wave, visually displays a bar graph in a separate sub-window, offering an easy and comfortable viewing.

- **The 8.4-inch color TFT LCD screen clearly displays the waveform and is easy to view.**


- **A combination of our proven Area, Dif-Area and Flutter comparison methods can be selected to perform the layer short test.**

All types of coils can be evaluated by choosing a combination of various test methods: Area Size Comparison, Differential Area Size Comparison, Flutter Value (Corona Discharge) Detection, and Laplacian Value and Laplacian Value (Corona Discharge) Detection. (* The Flutter Value Detection and the Laplacian Value Detection can only be selected alternatively.)

- **The equipped compact flash memory device offers an unlimited memory of the master data.**


HOW DOES THE IMPULSE WINDING TESTER WORK?

The impulse coil-winding tests the electrical characteristics of coil winding without damaging the sample. The prerequisite conditions for quality of a coil can be detected at just a glance. The detection is carried out when the same electric impulse by capacitor discharge is applied to the master and the test coils. The voltage decay waveform is generated in response to the impulse, related to the Q-factor and inductance (impedance) of the coil. In this sense, the tester can detect turn & layer short, the differences in the number of turns and the material of the core. If high impulse voltage is applied, the poor insulation will appear as a corona or layer discharge.

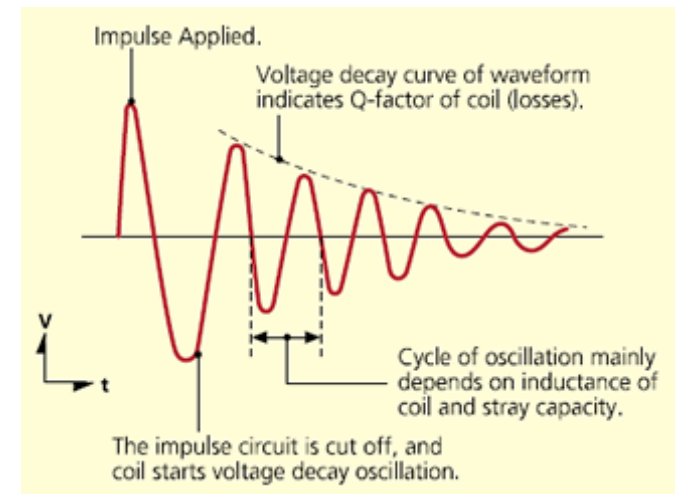


1. AREA SIZE COMPARISON

This compares each area size of the master coil and the sample coil waveform in the intentionally determined zone. In Fig. 1, the area size is calculated between 'a' and 'b', and OK/NG (Pass/Fail) is determined by comparing the area size (i.e. what percent (%) the sample waveform's area size differs from that of the master waveform). The detecting criterion is set by %. When the result is within the set value in %, the test coil is considered to be "OK". The area size of the wave is nearly proportional to the energy loss in the coil; therefore, the test coil is considered to be OK/NG by the amount of its energy loss. For example, when a sample coil layer has a short circuit, the short circuit area is reflected as an increase of energy loss.

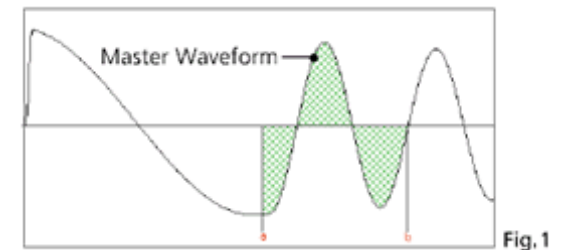


2.DIFFERENTIAL AREA COMPARISON

This calculates the area size of differential portion between the master coil and the sample coil waveforms in the intentionally determined zone. In Fig. 2, the differential area size is calculated between 'a' and 'b', and OK/NG is judged by detecting how large the differential area size is. The detecting criterion is set by %. When the result is within the set value in %, it is considered to be "OK". The differential area size represents the L value and total energy loss. This method is especially effective, for example, when the change of the L value causes major problems.

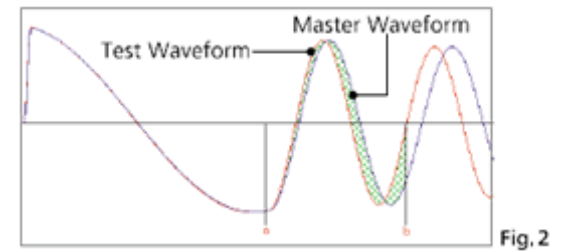


3.CORONA DISCHARGE (FLUTTER VALUE) DETECTION

Regardless of the difference in waveforms, this method only detects the high frequency energy of corona discharge as shown in Fig. 3. I detects the corona value in the intentionally determined zone of the waveform, and judges OK/NG by the corona evaluation value. The detecting criterion is set by an integer. The result that appears within the range is considered to be "OK". The wave is converted by derivative calculation and its area size is calculated. In an equivalent analog circuit, the energy value of the wave that passes through high pass filter is measured.

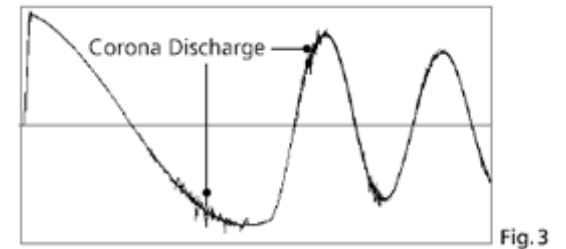

4.CORONA DISCHARGE (LAPLACIAN VALUE) DETECTION

The Laplacian is a method in digital filter processing used for detecting the edge intensity of an image. In the application to the Flutter Value, it measures the 2nd derivative of the image to find and extract the partial discharge. The discontinuity of the value hidden in the wave data (noise) can be digitized, offering an easier detection of the partial discharge (Fig. 4).

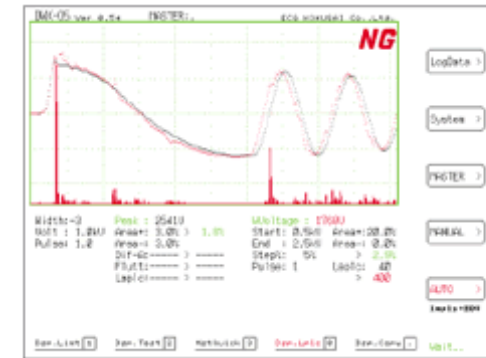

Input Test Circuit (Impedance)	Resistive Voltage Divider (5MOhm)	
Screen Display Resolution	640 x 480 Dots (VGA), 8.4" TFT Color LCD, 4 Color Display	
Waveform Display Range	512 x 256 Dots	
Detection Mode	Master Waveform Comparison Detection by Area Size Comparison, Differential Area Comparison and Corona Discharge	
Master Waveform Memory	Internal Memory: 196 Types (14 Types per Page, 14 Pages) 700-Types by Compact Flash Memory (14 Types/50 Pages)	
External Interface	Parallel I/O (Start, Reset, OK, NG, Busy, Master Numbers, etc.) RS-232C (Test Control, Test Data, etc.) Printer Port (Screen Hard Copy) Ethernet Adapter (Option)	
Accessories	A Tester Cable (1.5m), A Power Cable (With 3P Adaptor) A Compact Flash Memory, A Parallel I/O Connector An Instruction Manual and Inspection Record	
Environmental Conditions	0°C-40°C, AC Voltage Upon Your Request : 100V/115v/220v/240V±5%	
Dimension (Excluding the Handle)/ Weight	345 (W) ×185 (H) ×370 (D) Approx10Kg	345(W)×325(H)×370(D)

Coil tester

DWX Series Specifications Comparison



Inquiries about the products





Guide to Products

More ▶



Guidance of Calibration

More ▶



World network

More ▶

| HOME

| PRODUCTS

| TECHNOLOGY

| COMPANY

| INQUIRY

● **Coil tester**

**Impulse winding tester
DWX Series**

- ▶ DWX-01A, 05A, 10A
- ▶ DWX-300LI, DWX-01LI
- ▶ DWX-10LI
- ▶ DWX-15, DWX-15PD
- ▶ WT-1303
- ▶ Performance comparison table
- ▶ EtherNet Adoptor

Comprehensive testing machine

- ▶ Armature Coil Test System
- ▶ Stator Coil Test System
- ▶ WTX-typell
- ▶ AWX-05S

● **Discharge testing machine**

With regards to partial discharge test

- ▶ Impulse Partial Discharge tester
- ▶ ACPD-05X
- ▶ Impulse surge power supply

● **Inductor testing machine**

Insulation tester

- ▶ DWX-300LI DWX-01LI
- ▶ DWX-10LI

● **Unusual sound and vibration testing machine**

Motor Vibrophonic Monitor

- ▶ MV-90
- ▶ TC-55

Leakage Detector

- ▶ LA-60
- ▶ EK-100

● **Others**

Mechanical products

- ▶ FI-930T
- ▶ ADL-980
- ▶ ADFI-920T
- ▶ Electrical Discharge Plasma Pulse Power Generator

ECG KOKUSAI Co., Ltd. Japan Head Office

3-33-6 Shinmeidai Hamura City Tokyo 205-0023

TEL +81 (0) 42 - 554 - 5383 FAX +81 (0) 42 - 555 - 7380

Copyright (C) 2016 ECG-KOKUSAI CO., LTD. All rights reserved.